

Portable CD Player

Operating Instructions

تعليمات التشغيل (الصفحة الخلفية)

About area code

The area code of the player you purchased is shown on upper left of the bar code label on the package. For accessories supplied with your player, check the area code of your model and refer to "Supplied accessories" toward the end of this manual.




D-E220
D-E221
D-E221SR
D-E226CK

Sony Corporation ©2001 Printed in China

Playing a CD right away! **A**


If you want to play a CD right now, choose to use your CD player on house current. You can also use it on dry batteries (see "Power Sources" on the reverse side).

1 Connect

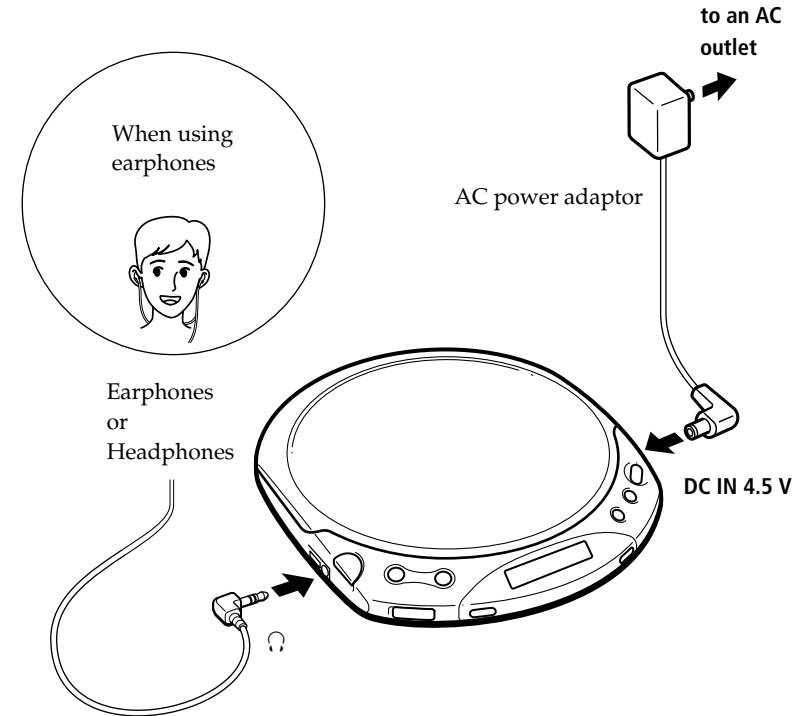


For models supplied with the AC plug adaptor
If the AC power adaptor does not fit the wall outlet, use the AC plug adaptor.

2 Place a CD

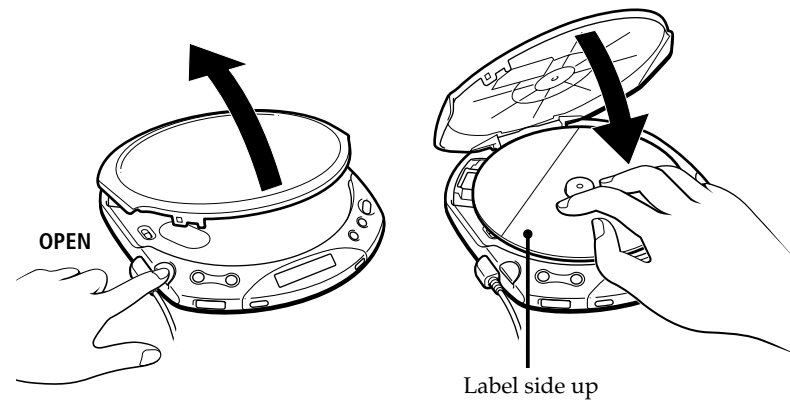

- ① Press OPEN to open the lid.
- ② Fit the CD to the pivot.
- ③ Close the lid.

3 Play

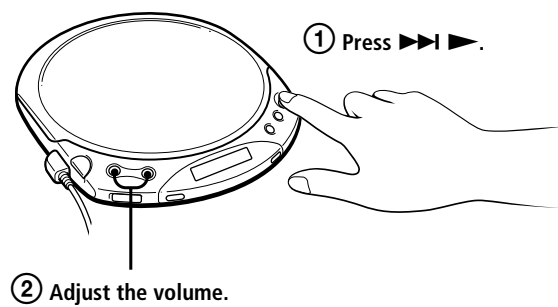


To stop play, press **■**/CHG.

To	Press
Find the beginning of the current track (AMS*)	◀◀ once
Find the beginning of previous tracks (AMS)	◀◀ repeatedly
Find the beginning of the next track (AMS)	▶▶ once
Find the beginning of succeeding tracks (AMS)	▶▶ repeatedly
Go forward quickly	Hold down ▶▶▶
Go backwards quickly	Hold down ◀◀◀

* AMS = Automatic Music Sensor

To remove the CD

Remove the CD while pressing the pivot.

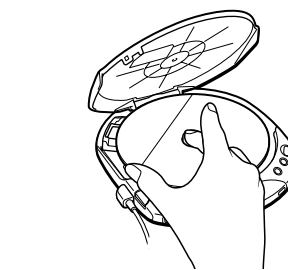


Notes on display

- When you press ▶▶▶, the total number of tracks in the CD and the total playing time appear.
- During play, the track number and the elapsed playing time of the current track appear.

Notes on handling CDs

- To keep the CD clean, handle it by its edge. Do not touch the surface.
- Do not stick paper or tape onto the CD.
- Do not expose the CD to direct sunlight or heat sources such as hot air ducts. Do not leave the CD in a car parked under direct sunlight.

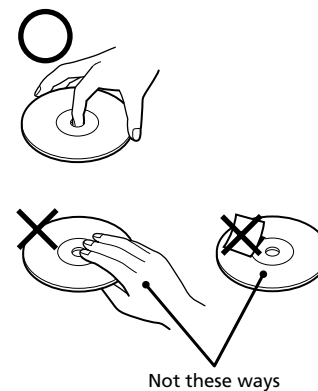


Not these ways


▶Other Operations

Selecting play mode **B**

You can enjoy the following five play modes: "Normal play", "Repeat play — all the tracks", "Single track play", "Repeat play — a single track" and "Repeat shuffle play".

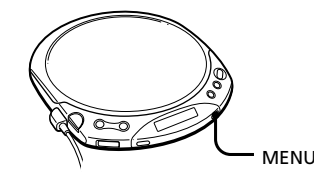

 Press MENU during play. Each time you press the button, the play mode indication in the display changes as follows:



No indication (Normal play)

The player plays all the tracks on the CD once.

"◁" (Repeat play — all the tracks)*

The player plays all the tracks on the CD repeatedly.

"1" (Single track play)

The player plays a single track you've selected once.

"◁ 1" (Repeat play — a single track)

The player plays a single track you've selected repeatedly.

"◁ SHUF" (Repeat shuffle play)

The player plays all the track on the CD in random order repeatedly.


* During Repeat play, you can locate the first track after the last track by pressing ▶▶▶ repeatedly. You can also locate the last track after first track by pressing ◀◀◀ repeatedly.

Using other functions

To maximize the skip protection performance (ESP MAX) **C**

The typical ESP (Electronic Shock Protection) function minimizes skipping by using a buffer memory that stores music data and plays it back in the event of a shock. The ESP MAX system is an extremely sophisticated technology. Due to the light weight and improved anti-shock characteristics of the optical block, this system recovers from the skipping much quicker than conventional technology such as ESP or ESP².

* Although ESP MAX provides excellent protection, skipping may occasionally occur.

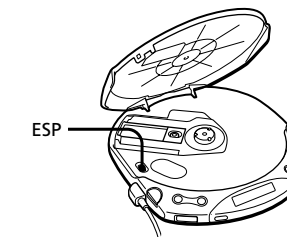

Set ESP to "ON."
The ESP indication appears.

To release the ESP MAX function, set ESP to "OFF."




Notes



- Playing may stop when the CD player gets a strong shock even with the ESP MAX function on.
- You may hear a noise or sound skip when:
 - listening to a dirty or scratched CD,
 - listening to an audio test CD or,
 - the player receives continuous shock.

To enjoy more powerful bass sound (Digital MEGA BASS) **D**

You can emphasize the bass-boosted sound.

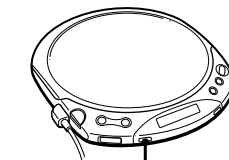

 Press SOUND to select "BASS ■" or "BASS ■■."

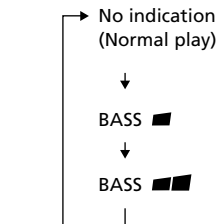

The selected sound mode is displayed.


"BASS ■■" enhances the bass sound more than "BASS ■."

Note

- If the sound is distorted when using the SOUND function, turn down the volume.

To lock the buttons **E**

You can lock your CD player against any accidental operations.

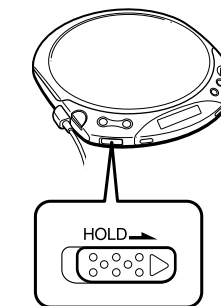


Slide HOLD in the direction of the arrow. When you press any button, "Hold d" appears in the display and you cannot operate the CD player.


To unlock, slide HOLD in the opposite direction of the arrow.

To protect your hearing (AVLS) **F**


The AVLS (Automatic Volume Limiter System) function keeps down the maximum volume to protect your ears.

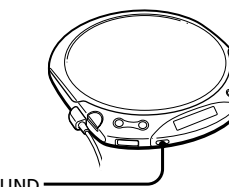

 Hold down SOUND until "AVLS" appears in the display.



 If you turn up the volume to "3:", you cannot turn up the volume any more.



If you want to turn up the volume to more than "3:", hold down SOUND until "AVLS" disappears from the display.


* For the customers in France
This level is set to "5:".

Note

- If you use the sound function and the AVLS function at the same time, sound may be distorted. If this happens, turn down the volume.

Connecting to other stereo equipment **G**

You can listen to the CD through other stereo equipment or record a CD on a cassette tape. Refer to the instruction manual of the other equipment for details. Before making connections, turn off each piece of equipment.

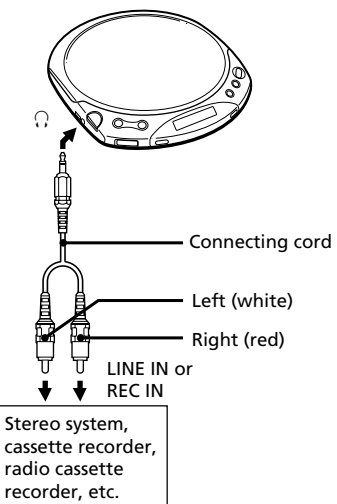

Notes

- Before you play the CD, turn down the volume of the connected equipment so as not to damage the connected speakers.
- If you turn up the volume to more than "B:", the sound may be distorted.

Continue to the reverse side →

