

SONY

CD Radio Cassette-Corder

Operating Instructions

GB

3-277-987-12(1)

Notice for customers: the following information is only applicable to equipment sold in countries applying EU directives

The manufacturer of this product is Sony Corporation, 1-7-1 Konan, Minato-ku, Tokyo, 108-0075 Japan. The Authorized Representative for EMC and product safety is Sony Deutschland GmbH, Hedelfinger Strasse 61, 70327 Stuttgart, Germany. For any service or guarantee matters, please refer to the addresses given in separate service or guarantee documents.

Notes on DualDiscs

A DualDisc is a two sided disc product which mates DVD recorded material on one side with digital audio material on the other side. However, since the audio material side does not conform to the Compact Disc (CD) standard, playback on this product is not guaranteed.

Music discs encoded with copyright protection technologies

This product is designed to playback discs that conform to the Compact Disc (CD) standard. Recently, various music discs encoded with copyright protection technologies are marketed by some record companies. Please be aware that among those discs, there are some that do not conform to the CD standard and may not be playable by this product.

MPEG Layer-3 audio coding technology and patents licensed from Fraunhofer IIS and Thomson.

Specifications

CD player section

System
Compact disc digital audio system

Laser diode properties
Emission duration: Continuous
Laser output: Less than 44.6 µW
(This output is the value measured at a distance of about 200 mm from the objective lens surface on the optical pick-up block with 7 mm aperture.)

Spindle speed
200 r/min (rpm) to 500 r/min (rpm) (CLV)

Number of channels
2

Frequency response
20 - 20 000 Hz +/- 2 dB

Vwow and flutter
Below measurable limit

Radio section

Frequency range

120 V model
FM: 87.5 - 108 MHz
AM: 530 - 1 710 kHz

Other models
FM: 87.5 - 108 MHz
AM: 531 - 1 611 kHz (9 kHz step)
530 - 1 610 kHz (10 kHz step)

Antenna
FM: Telescopic antenna
AM: Built-in ferrite bar antenna

Cassette-corder section

Recording system
4-track 2 channel stereo
Fast winding time
Approx. 120 s (sec.) with Sony cassette C-60

Frequency response
TYPE I (normal): 80 - 10 000 Hz

USB section

Supported bit rate
MP3 (MPEG 1 Audio Layer-3):
32 - 320 kbps, VBR

Sampling frequencies
MP3 (MPEG 1 Audio Layer-3):
32/44.1/48 kHz

↔ (USB) port
USB-A (Full Speed)

General

Speaker
Full range: 10 cm dia., 3.2 Ω, cone type (2)

Input
↔ (USB) port: Type A, maximum current 500 mA

Outputs
Headphones jack (stereo minijack)
For 16 - 68 Ω impedance headphones

Power output
2.3 W + 2.3 W (at 3.2 Ω, 10% harmonic distortion)

Power requirements

For CD radio cassette-corder:
Malaysia, Singapore and Thailand models: 230 - 240 V AC, 50 Hz
Mexico model: 120 V AC, 60 Hz
Other models: 230 V AC, 50 Hz
9 V DC, 6 R20 (size D) batteries
For remote control:
3 V DC, 2 R03 (size AAA) batteries

Power consumption
AC 18 W

Battery life
For CD radio cassette-corder:

FM recording

Sony R20P: approx. 13.5 h

Sony alkaline LR20: approx. 20 h

Tape playback

Sony R20P: approx. 7 h

Sony alkaline LR20: approx. 12 h

CD playback

Sony R20P: approx. 2.5 h

Sony alkaline LR20: approx. 7 h

Dimensions

Approx. 420 x 158.5 x 260 mm (w/h/d)

(incl. projecting parts)

Mass
Approx. 3.8 kg (incl. batteries)

Supplied accessories

AC power cord (1)

Remote control (1)


Design and specifications are subject to change without notice.

Optional accessories


Sony MDR headphones series

Basic Operations

Audio CD

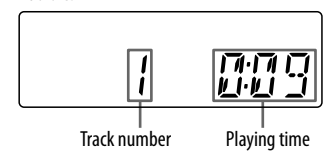

MP3 disc

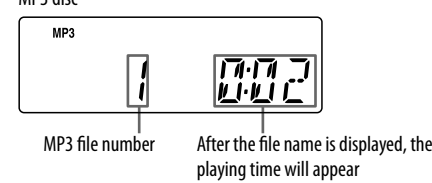

To	Press
----	-------

Pause playback **▶||** on the unit (**||** on the remote) **[6]**. To resume play, press it again.

Stop playback **■ [6]**.

Go to the next track/MP3 file **▶▶ [10]**.

Go back to the previous track/MP3 file **◀◀ [10]**.

Select a folder on an MP3 disc **+** on the unit to go forward and **-** to go backward **[1]**. (On the remote, use FOLDER + or - **[1]**.)

Locate a point while listening to the sound **▶▶** (forward) or **◀◀** (backward) **[1]** on the unit while playing and hold it until you find the point (On the remote, use **▶▶** or **◀◀** **[10]**.)

Locate a point while observing the display **▶▶** (forward) or **◀◀** (backward) **[1]** on the unit in pause and hold it until you find the point (On the remote, use **▶▶** or **◀◀** **[10]**.)

Locate a specific track/MP3 file directly the number button **[22]** of the track/MP3 file on the remote.

Remove the CD **▲ [8]** PUSH OPEN/CLOSE **[8]**.

Locate a point while listening to the sound **▶▶** (forward) or **◀◀** (backward) **[1]** on the unit while playing and hold it until you find the point (On the remote, use **▶▶** or **◀◀** **[10]**.)

Locate a point while observing the display **▶▶** (forward) or **◀◀** (backward) **[1]** on the unit in pause and hold it until you find the point (On the remote, use **▶▶** or **◀◀** **[10]**.)

Locate a specific track/MP3 file directly the number button **[22]** of the track/MP3 file on the remote.

Remove the CD **▲ [8]** PUSH OPEN/CLOSE **[8]**.

Locate a point while listening to the sound **▶▶** (forward) or **◀◀** (backward) **[1]** on the unit while playing and hold it until you find the point (On the remote, use **▶▶** or **◀◀** **[10]**.)

Locate a point while observing the display **▶▶** (forward) or **◀◀** (backward) **[1]** on the unit in pause and hold it until you find the point (On the remote, use **▶▶** or **◀◀** **[10]**.)

Locate a specific track/MP3 file directly the number button **[22]** of the track/MP3 file on the remote.

Remove the CD **▲ [8]** PUSH OPEN/CLOSE **[8]**.

Locate a point while listening to the sound **▶▶** (forward) or **◀◀** (backward) **[1]** on the unit while playing and hold it until you find the point (On the remote, use **▶▶** or **◀◀** **[10]**.)

Locate a point while observing the display **▶▶** (forward) or **◀◀** (backward) **[1]** on the unit in pause and hold it until you find the point (On the remote, use **▶▶** or **◀◀** **[10]**.)

Locate a specific track/MP3 file directly the number button **[22]** of the track/MP3 file on the remote.

Remove the CD **▲ [8]** PUSH OPEN/CLOSE **[8]**.

Locate a point while listening to the sound **▶▶** (forward) or **◀◀** (backward) **[1]** on the unit while playing and hold it until you find the point (On the remote, use **▶▶** or **◀◀** **[10]**.)

Locate a point while observing the display **▶▶** (forward) or **◀◀** (backward) **[1]** on the unit in pause and hold it until you find the point (On the remote, use **▶▶** or **◀◀** **[10]**.)

Locate a specific track/MP3 file directly the number button **[22]** of the track/MP3 file on the remote.

Remove the CD **▲ [8]** PUSH OPEN/CLOSE **[8]**.

Locate a point while listening to the sound **▶▶** (forward) or **◀◀** (backward) **[1]** on the unit while playing and hold it until you find the point (On the remote, use **▶▶** or **◀◀** **[10]**.)

Locate a point while observing the display **▶▶** (forward) or **◀◀** (backward) **[1]** on the unit in pause and hold it until you find the point (On the remote, use **▶▶** or **◀◀** **[10]**.)

Locate a specific track/MP3 file directly the number button **[22]** of the track/MP3 file on the remote.

Remove the CD **▲ [8]** PUSH OPEN/CLOSE **[8]**.

Locate a point while listening to the sound **▶▶** (forward) or **◀◀** (backward) **[1]** on the unit while playing and hold it until you find the point (On the remote, use **▶▶** or **◀◀** **[10]**.)

Locate a point while observing the display **▶▶** (forward) or **◀◀** (backward) **[1]** on the unit in pause and hold it until you find the point (On the remote, use **▶▶** or **◀◀** **[10]**.)

Locate a specific track/MP3 file directly the number button **[22]** of the track/MP3 file on the remote.

Remove the CD **▲ [8]** PUSH OPEN/CLOSE **[8]**.

Locate a point while listening to the sound **▶▶** (forward) or **◀◀** (backward) **[1]** on the unit while playing and hold it until you find the point (On the remote, use **▶▶** or **◀◀** **[10]**.)

Locate a point while observing the display **▶▶** (forward) or **◀◀** (backward) **[1]** on the unit in pause and hold it until you find the point (On the remote, use **▶▶** or **◀◀** **[10]**.)

Locate a specific track/MP3 file directly the number button **[22]** of the track/MP3 file on the remote.

Remove the CD **▲ [8]** PUSH OPEN/CLOSE **[8]**.

Locate a point while listening to the sound **▶▶** (forward) or **◀◀** (backward) **[1]** on the unit while playing and hold it until you find the point (On the remote, use **▶▶** or **◀◀** **[10]**.)

Locate a point while observing the display **▶▶** (forward) or **◀◀** (backward) **[1]** on the unit in pause and hold it until you find the point (On the remote, use **▶▶** or **◀◀** **[10]**.)

Locate a specific track/MP3 file directly the number button **[22]** of the track/MP3 file on the remote.

Remove the CD **▲ [8]** PUSH OPEN/CLOSE **[8]**.

Locate a point while listening to the sound **▶▶** (forward) or **◀◀** (backward) **[1]** on the unit while playing and hold it until you find the point (On the remote, use **▶▶** or **◀◀** **[10]**.)

Locate a point while observing the display **▶▶** (forward) or **◀◀** (backward) **[1]** on the unit in pause and hold it until you find the point (On the remote, use **▶▶** or **◀◀** **[10]**.)

Locate a specific track/MP3 file directly the number button **[22]** of the track/MP3 file on the remote.

Remove the CD **▲ [8]** PUSH OPEN/CLOSE **[8]**.

Locate a point while listening to the sound **▶▶** (forward) or **◀◀** (backward) **[1]** on the unit while playing and hold it until you find the point (On the remote, use **▶▶** or **◀◀** **[10]**.)

Locate a point while observing the display **▶▶** (forward) or **◀◀** (backward) **[1]** on the unit in pause and hold it until you find the point (On the remote, use **▶▶** or **◀◀** **[10]**.)

Locate a specific track/MP3 file directly the number button **[22]** of the track/MP3 file on the remote.

Remove the CD **▲ [8]** PUSH OPEN/CLOSE **[8]**.

Locate a point while listening to the sound **▶▶** (forward) or **◀◀** (backward) **[1]** on the unit while playing and hold it until you find the point (On the remote, use **▶▶** or **◀◀** **[10]**.)

Locate a point while observing the display **▶▶** (forward) or **◀◀** (backward) **[1]** on the unit in pause and hold it until you find the point (On the remote, use **▶▶** or **◀◀** **[10]**.)

Locate a specific track/MP3 file directly the number button **[22]** of the track/MP3 file on the remote.

Remove the CD **▲ [8]** PUSH OPEN/CLOSE **[8]**.

Locate a point while listening to the sound **▶▶** (forward) or **◀◀** (backward) **[1]** on the unit while playing and hold it until you find the point (On the remote, use **▶▶** or **◀◀** **[10]**.)

Locate a point while observing the display **▶▶** (forward) or **◀◀** (backward) **[1]** on the unit in pause and hold it until you find the point (On the remote, use **▶▶** or **◀◀** **[10]**.)

Locate a specific track/MP3 file directly the number button **[22]** of the track/MP3 file on the remote.

Remove the CD **▲ [8]** PUSH OPEN/CLOSE **[8]**.

Locate a point while listening to the sound **▶▶** (forward) or **◀◀** (backward) **[1]** on the unit while playing and hold it until you find the point (On the remote, use **▶▶** or **◀◀** **[10]**.)

Locate a point while observing the display **▶▶** (forward) or **◀◀** (backward) **[1]** on the unit in pause and hold it until you find the point (On the remote, use **▶▶** or **◀◀** **[10]**.)

Locate a specific track/MP3 file directly the number button **[22]** of the track/MP3 file on the remote.

Remove the CD **▲ [8]** PUSH OPEN/CLOSE **[8]**.

Locate a point while listening to the sound **▶▶** (forward) or **◀◀** (backward) **[1]** on the unit while playing and hold it until you find the point (On the remote, use **▶▶** or **◀◀** **[10]**.)

Locate a point while observing the display **▶▶** (forward) or **◀◀** (backward) **[1]** on the unit in pause and hold it until you find the point (On the remote, use **▶▶** or **◀◀** **[10]**.)

Locate a specific track/MP3 file directly the number button **[22]** of the track/MP3 file on the remote.

Remove the CD **▲ [8]** PUSH OPEN/CLOSE **[8]**.

Locate a point while listening to the sound **▶▶** (forward) or **◀◀** (backward) **[1]** on the unit while playing and hold it until you find the point (On the remote, use **▶▶** or **◀◀** **[10]**.)

Locate a point while observing the display **▶▶** (forward) or **◀◀** (backward) **[1]** on the unit in pause and hold it until you find the point (On the remote, use **▶▶** or **◀◀** **[10]**.)

Locate a specific track/MP3 file directly the number button **[22]** of the track/MP3 file on the remote.

Remove the CD **▲ [8]** PUSH OPEN/CLOSE **[8]**.

Locate a point while listening to the sound **▶▶** (forward) or **◀◀** (backward) **[1]** on the unit while playing and hold it until you find the point (On the remote, use **▶▶** or **◀◀** **[10]**.)

Locate a point while observing the display **▶▶** (forward) or **◀◀** (backward) **[1]** on the unit in pause and hold it until you find the point (On the remote, use **▶▶** or **◀◀** **[10]**.)

Locate a specific track/MP3 file directly the number button **[22]** of the track/MP3 file on the remote.

Remove the CD **▲ [8]** PUSH OPEN/CLOSE **[8]**.

Locate a point while listening to the sound **▶▶** (forward) or **◀◀** (backward) **[1]** on the unit while playing and hold it until you find the point (On the remote, use **▶▶** or **◀◀** **[10]**.)

Locate a point while observing the display **▶▶** (forward) or **◀◀** (backward) **[1]** on the unit in pause and hold it until you find the point (On the remote, use **▶▶** or **◀◀** **[10]**.)

Locate a specific track/MP3 file directly the number button **[22]** of the track/MP3 file on the remote.

Remove the CD **▲ [8]** PUSH OPEN/CLOSE **[8]**.

Locate a point while listening to the sound **▶▶** (forward) or **◀◀** (backward) **[1]** on the unit while playing and hold it until you find the point (On the remote, use **▶▶** or **◀◀** **[10]**.)

Locate a point while observing the display **▶▶** (forward) or **◀◀** (backward) **[1]** on the unit in pause and hold it until you find the point (On the remote, use **▶▶** or **◀◀** **[10]**.)

Locate a specific track/MP3 file directly the number button **[22]** of the track/MP3 file on the remote.

Remove the CD **▲ [8]** PUSH OPEN/CLOSE **[8]**.

Locate a point while listening to the sound **▶▶** (forward) or **◀◀** (backward) **[1]** on the unit while playing and hold it until you find the point (On the remote, use **▶▶** or **◀◀** **[10]**.)

Locate a point while observing the display **▶▶** (forward) or **◀◀** (backward) **[1]** on the unit in pause and hold it until you find the point (On the remote, use **▶▶** or **◀◀** **[10]**.)

Locate a specific track/MP3 file directly the number button **[22]** of the track/MP3 file on the remote.

Remove the CD **▲ [8]** PUSH OPEN/CLOSE **[8]**.

Locate a point while listening to the sound **▶▶** (forward) or **◀◀** (backward) **[1]** on the unit while playing and hold it until you find the point (On the remote, use **▶▶** or **◀◀** **[10]**.)

Locate a point while observing the display **▶▶** (forward) or **◀◀** (backward) **[1]** on the unit in pause and hold it until you find the point (On the remote, use **▶▶** or **◀◀** **[10]**.)

Locate a specific track/MP3 file directly the number button **[22]** of the track/MP3 file on the remote.

Remove the CD **▲ [8]** PUSH OPEN/CLOSE **[8]**.

Locate a point while listening to the sound **▶▶** (forward) or **◀◀** (backward) **[1]** on the unit while playing and hold it until you find the point (On the remote, use **▶▶** or **◀◀** **[10]**.)

Locate a point while observing the display **▶▶** (forward) or **◀◀** (backward) **[1]** on the unit in pause and hold it until you find the point (On the remote, use **▶▶** or **◀◀** **[10]**.)

Locate a specific track/MP3 file directly the number button **[22]** of the track/MP3 file on the remote.

Listening to the radio

1 Press RADIO **[12]** on the unit (BAND **[2]**) on the remote) repeatedly.

Each time you press the button, the indication changes as follows:
"FM" → "AM".

2 Hold down TUNE + or - **[1]** until the frequency digits begin to change in the display.

The unit automatically scans the radio frequencies and stops when it finds a clear station.

If you cannot tune in a station, press TUNE + or - **[1]** repeatedly to change the frequency step by step. When an FM stereo broadcast is received, "ST" appears.

Tip

If the FM broadcast is noisy, press MODE **[18]** until "Mono" appears in the display and the radio will play in monaural.

Changing the AM tuning interval (Except for the 120 V model)

If you need to change the AM tuning interval, do the following:

Other Operations


Using the display

You can check information about the CD using the display.

Checking the information of an audio CD


To check the total track number and playing time of the CD

Press ■ **[6]** to stop the CD playback.

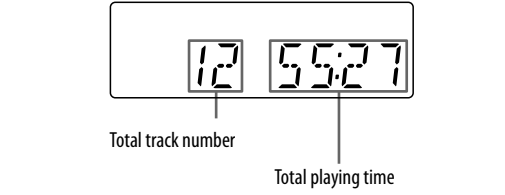

Checking the information of an MP3 disc


To check the total folder number on the CD
Press ■ **[6]** to stop the CD playback.

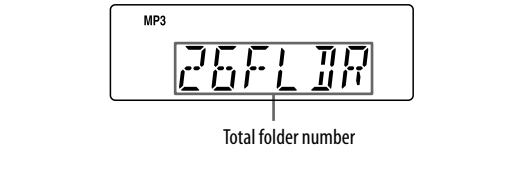

To check file information

Press DISP/ENT/MEMORY **[17]** on the unit while playing an MP3 disc. The display changes as follows:

→ The current file number and playing time

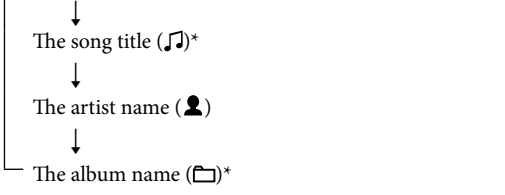

* If the file does not have ID3 information, file name or folder name appears in the display.

Playing tracks/MP3 files repeatedly (Repeat Play)

You can play tracks/MP3 files repeatedly in normal, shuffle or program play modes.

- Press CD **[12]** on the unit. “CD” appears in the display.
- Proceed as follows.

To repeat	Do this
a single track/MP3 file	<ol style="list-style-type: none">Press REPEAT [19] on the unit until “↺ 1” appears. Press ◀ or ▶ [10] to select the track/MP3 file that you want to repeat. Press ▶ [11] on the unit (▶ on the remote) [6].
all tracks/MP3 files on the CD	<ol style="list-style-type: none">Press REPEAT [19] on the unit until “↺” appears. Press ▶ [11] on the unit (▶ on the remote) [6].
a selected folder (MP3 disc only)	<ol style="list-style-type: none">Press REPEAT [19] on the unit until “↺” and “📀” appear. Select the folder by pressing 📀 + or 📀 - (FOLDER + or - on the remote) [11]. Press ▶ [11] on the unit (▶ on the remote) [6].
tracks/MP3 files in random order	<ol style="list-style-type: none">Start Shuffle Play (see “Playing tracks/MP3 files in random order”). Press REPEAT [19] on the unit until “SHUF” and “↺” appear. Press ▶ [11] on the unit (▶ on the remote) [6].
MP3 files in a selected folder in random order (MP3 disc only)	<ol style="list-style-type: none">Start Folder Shuffle Play (see “Playing tracks/MP3 files in random order”). Press REPEAT [19] on the unit until “↺”, “SHUF” and “📀” appear. Press ▶ [11] on the unit (▶ on the remote) [6].
programed tracks/MP3 files	<ol style="list-style-type: none">Program tracks/MP3 files (see “Creating your own program”). Press REPEAT [19] on the unit until “↺” and “PGM” appear. Press ▶ [11] on the unit (▶ on the remote) [6].

To cancel Repeat Play

Press REPEAT **[19]** on the unit until “↺” disappears from the display.

Playing tracks/MP3 files in random order (Shuffle Play)

You can play tracks/MP3 files in random order.

- Press CD **[12]** on the unit. “CD” appears in the display.
- Press MODE **[18]** until “SHUF” appears in the display.
- Press ▶ **[11]** on the unit (▶ on the remote) **[6]** to start Shuffle Play.

To cancel Shuffle Play

Stop playing first. Then press MODE **[18]** until “SHUF” disappears from the display.

- Tips**
- During Shuffle Play, you cannot select the previous track/MP3 file by pressing ◀ **[10]**.
 - The resume function does not work during Shuffle Play.


Creating your own program (Program Play)

You can arrange the playing order of up to 25 tracks/MP3 files on a CD.

- Press CD **[12]** on the unit. “CD” appears in the display.
- Press MODE **[18]** until “PGM” appears in the display.
- Press ◀ or ▶ **[10]** to select the track/MP3 file, and then press DISP/ENT/MEMORY **[17]** to add it to the program. Repeat to program other tracks in the order that you want.

After programming the first track, “STEP 1” appears, followed by selected track/MP3 file.

Each time you add a track/MP3 file, the step number increments by one.

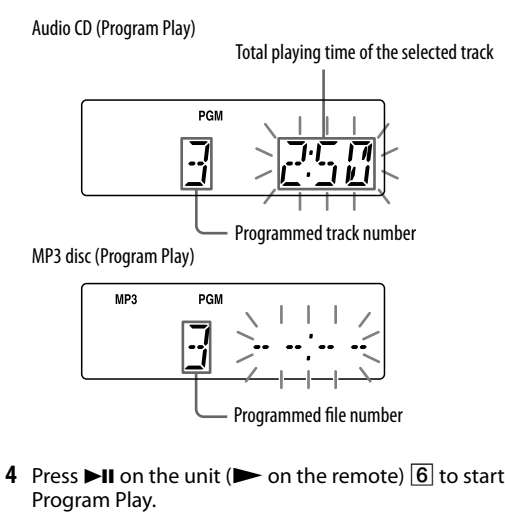

- Press ▶ **[11]** on the unit (▶ on the remote) **[6]** to start Program Play.

To cancel Program Play

Stop playing first. Then press MODE **[18]** until “PGM” disappears from the display.

To delete the last track of the program

Press CLEAR **[20]** on the remote while the unit is stopped.

- Tips**
- You can play the same program again, since the program is saved until you open the CD compartment.
 - You can record your own program. After you've created the program, insert a blank tape and press ● **[13]** on the unit to start recording.
 - The resume function does not work during Program Play.

Presetting radio stations

You can store radio stations into the unit’s memory. You can preset up to 30 radio stations, 20 for FM and 10 for AM in any order.

- Press RADIO **[12]** repeatedly on the unit to select the band.
- Hold down RADIO **[12]** on the unit for 2 seconds until “AUTO” flashes in the display.
- Press DISP/ENT/MEMORY **[17]** on the unit. The stations are stored in memory from the lower frequencies to the higher ones.

If a station cannot be preset automatically

You need to preset a station with a weak signal manually.

- Press RADIO **[12]** repeatedly on the unit to select the band.
- Tune in a station you want.
- Hold down DISP/ENT/MEMORY **[17]** on the unit for 2 seconds until the preset number flashes in the display.
- Press PRESET + or - **[10]** on the unit until the preset number you want for the station flashes in the display.
- Press DISP/ENT/MEMORY **[17]** on the unit. The new station replaces the old one.

On the remote

- Press BAND **[21]** until the band you want appears in the display.
- Tune in a station you want.
- Hold down the number buttons **[22]** that you want to preset the new station on for about 2 seconds. To select a one-digit preset number, hold down the number for about 2 seconds. To select a two-digit preset number, press the first digit, and then hold down the second digit for about 2 seconds. (Example) For preset number 1: Hold down 1 **[22]** for about 2 seconds. For preset number 12: Press 1 **[22]**, and then hold down 2 **[22]** for about 2 seconds.

Tip

The preset radio stations remain in memory even if you unplug the AC power cord or remove the batteries.

Playing preset radio stations

- Press RADIO **[12]** repeatedly on the unit to select the band.
- Press PRESET + or - **[10]** on the unit to tune in the stored station.

On the remote

- Press BAND **[21]** repeatedly to select the band.
- Press the number buttons **[22]** to tune in the stored station. (Examples) For preset number 1: Press 1 **[22]**, and then ENTER **[23]**. For preset number 12: Press 1, 2 **[22]**, and then ENTER **[23]**.

Falling asleep to music

- Play the music source you want.
- Press SLEEP **[14]** to display “SLEEP”.
- Press SLEEP **[14]** to select the minutes until the unit goes off automatically.

Each time you press the button, the indication changes as follows:

“AUTO” → “60MIN” → “30MIN” → “20MIN” → “10MIN” → “OFF”.

* When you select “AUTO”, the CD stops playing in 90 minutes at most and the unit goes off automatically. When you are listening to the radio, the radio goes off in 90 minutes.

If 4 seconds have passed after you pressed SLEEP **[14]**, the minutes in the display are entered. When the preset time has passed, the unit goes off automatically.

To cancel the sleep function

Press OPERATE **[15]** or SLEEP **[14]** to turn off the power.

Note

When you are playing a tape using this function: If the tape length of one side is longer than the set time, the unit will not go off until the tape reaches the end.

Recording a single track or MP3 file to a USB device during playback

REC1 Recording

This procedure allows you to easily record the currently playing track or MP3 file to a USB device. See also “Synchro Recording” in “Recording from a disc to a USB device” on the front page.

- Connect a USB device with recording capability to the ↔ (USB) port **[3]**.
- Press CD **[12]** and insert the disc with the track or MP3 file that you want to record.
- Select the track or MP3 file and start playing it.
- Press CD-USB SYNC/REC1 **[4]** on the unit while the selected track or MP3 file is playing. “REC” flashes and the display cycles through “REC 1”, “FREExxM” (free space on the USB device) and “PUSH ENT”. The USB device changes to recording standby and the unit to play pause.
 - If the unit of the free space capacity is giga-byte, “FREExxxG” will be displayed.
- Press DISP/ENT/MEMORY **[17]** on the unit (or ENTER **[23]** on the remote). Recording starts. When recording is completed, the CD player continues to play.

To stop recording

Press ■ **[6]**.

Precautions

Playable/Recordable USB devices

You can use the following Sony USB devices on this unit. Other USB devices are not playable/recordable on this unit.

Verified Sony digital music player (as of January 2007)

Product name	Model name
Walkman [®]	NWD-B103/B103F/B105/B105F

Verified Sony USB storage media (as of January 2007)

Product name	Model name
MICROVAULT	USM512EX / 1GEX / 2GEX <p>USM128J / 256J / 512J / 1GJ / 2GJ / 4GJ</p> <p>USM512JX / 1GJX / 2GJX / 4GJX</p> <p>USM256H / 512H / 1GH / 2GH / 4GH</p>

Check the websites below for the latest information about compatible devices.

For customers in Europe: <http://sonydigital-link.com/dna>

For customers in Latin America: <http://www.sony-latin.com/pa/info>
For customers in Asia and Oceania: <http://www.css.ap.sony.com/>

- Notes**
- When formatting the above models, be sure to format using the model itself or the dedicated formatting software for that model. Otherwise, you may be unable to record the USB device properly on this unit.
 - Do not use USB devices other than these USB devices. Operation of models not listed here is not guaranteed.
 - Operation may not always be ensured even when using these USB devices.
 - Some of these USB devices may not be available for purchase in certain areas.

Troubleshooting

Discs that this unit CAN play


- Audio CD
- CD-R/CD-RW (CD-DA*/MP3 files)
- * CD-DA is the abbreviation for Compact Disc Digital Audio. It is a recording standard used for Audio CDs.

Discs that this unit CANNOT play

- CD-R/CD-RW other than those recorded in music CD format or MP3 format conforming to ISO9660 Level 1/ Level 2 or Joliet
- CD-R/CD-RW of poor recording quality, CD-R/CD-RW that has scratches or are dirty, or CD-R/CD-RW recorded with an incompatible recording device
- CD-R/CD-RW which is finalized incorrectly

Notes on discs

- Before playing, clean the CD with a cleaning cloth. Wipe the CD from the center out. If there is a scratch, dirt or fingerprints on the CD, it may cause tracking error.

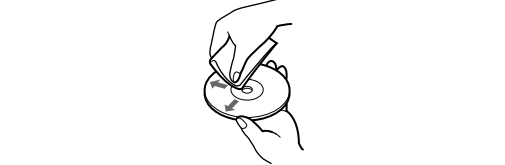

- Do not use solvents such as benzine, thinner, commercially available cleaners or anti-static spray intended for vinyl LPs.
- Do not expose the CD to direct sunlight or heat sources such as hot air ducts, nor leave it in a car parked in direct sunlight as there can be a considerable rise in temperature inside the car.
- Do not stick paper or sticker on the CD, nor scratch the surface of the CD.
- After playing, store the CD in its case.

On safety

- As the laser beam used in the CD player section is harmful to the eyes, do not attempt to disassemble the casing. Refer servicing to qualified personnel only.
- Should any solid object or liquid fall into the unit, unplug the unit, and have it checked by qualified personnel before operating it any further.
- Discs with non-standard shapes (e.g., heart, square, star) cannot be played on this unit. Attempting to do so may damage the unit. Do not use such discs.

On power sources

- For AC operation, check that the unit’s operating voltage is identical with your local power supply (see “Specifications”) and use the supplied AC power cord; do not use any other type.
- The unit is not disconnected from the AC power source (mains) as long as it is connected to the wall outlet, even if the unit itself has been turned off.
- Unplug the unit from the wall outlet when it is not used for an extended period of time.
- When the batteries are not to be used, remove them to avoid damage that can be caused by battery leakage or corrosion.
- The nameplate indicating operating voltage, power consumption, etc. is located at the bottom.

On placement


- Do not leave the unit in a location near heat sources, in a place subject to direct sunlight, excessive dust or mechanical shock or in a car subject to the direct rays of the sun.
- Do not place the unit on an inclined or unstable place.
- Do not place anything within 10 mm of the side of the cabinet. The ventilation holes must be unobstructed for the unit to operate properly and prolong the life of its components.
- Since a strong magnet is used for the speakers, keep personal credit cards using magnetic coding or spring-wound watches away from the unit to prevent possible damage from the magnet.

On operation

- If the unit is brought directly from a cold to a warm location, or is placed in a very damp room, moisture may condense on the lens inside the CD player section. Should this occur, the unit will not operate properly. In this case, remove the CD and wait about an hour for the moisture to evaporate.
- If the unit has not been used for a long time, set it in the playback mode to warm it up for a few minutes before inserting a cassette.

Notes on cassettes

- Break off the cassette tab from side A or B to prevent accidental recording. If you want to reuse the tape for recording, cover the broken tab with adhesive tape.

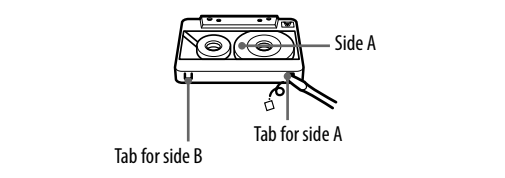

- The use of a cassette with more than 90 minutes of play time is not recommended except for long, continuous recording or playback.

Cleaning the cabinet

- Clean the cabinet, panel and controls with a soft cloth slightly moistened with a mild detergent solution. Do not use any type of abrasive pad, scouring powder, or solvent, such as alcohol or benzine.

If you have any questions or problems concerning your unit, please consult your nearest Sony dealer.

Troubleshooting

General

The power is not on.

- Connect the AC power cord to the wall outlet securely.
- Make sure the batteries are inserted correctly.
- Replace all the batteries with new ones if they are weak.
- You cannot turn on the unit with the remote when you operate the unit on batteries.

The power is not on, and “BATTERY” and “ERROR” are displayed alternately.

- Make sure the batteries are inserted correctly.
- Replace all the batteries with new ones if they are weak.

There is no audio.

- Unplug the headphones when listening through speakers.

Noise is heard.

- Someone is using a portable telephone or other equipment that emits radio waves near the unit. → Move the portable telephone, etc., away from the unit.

CD/MP3 player

The CD does not play or “NO DISC” is displayed even when a CD is in place.

- Place the CD with the label surface up.
- Clean the CD.
- Take out the CD and leave the CD compartment open for about an hour to dry moisture condensation.
- The CD-R/CD-RW is blank.
- There is a problem with the quality of the CD-R/ CD-RW, recording device or application software.
- Replace all the batteries with new ones if they are weak.

The sound drops out.

- Reduce the volume.
- Clean the CD, or replace it if the CD is badly damaged.
- Place the unit in a location free from vibration.
- Clean the lens with a commercially available blower.
- The sound may drop out or noise may be heard when using poor quality CD-Rs/CD-RWs or if there is a problem with the recording device or application software.


Starting playback takes more time than usual.

- The following discs take a longer time to start playback.
 - a disc recorded with a complicated tree structure.
 - a disc that has not been finalized (a disc to which data can be added).
 - a disc that has many folders or non-MP3 files.


Radio

Reception is poor.

- Reorient the antenna to improve FM reception.

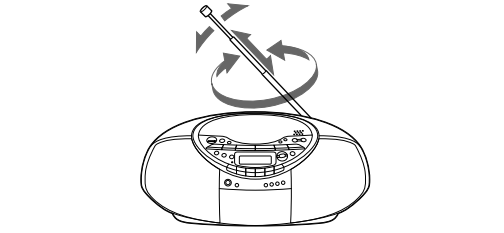

- Reorient the unit itself to improve AM reception.

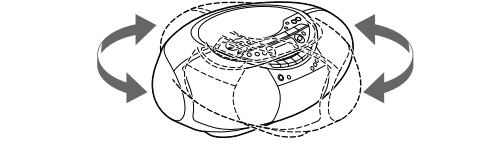

The audio is weak or has poor quality.

- Replace all the batteries with new ones if they are weak.
- Move the unit away from the TV.
- If you are using the remote while listening to AM radio, noise may be heard.

The picture of your TV becomes unstable.

- If you are listening to an FM program near the TV with an indoor antenna, move the unit away from the TV.

Tape player

The tape does not move when you press an operation button.

- Close the cassette compartment securely.

The ● button **[13] does not function or the tape does not play or record.**

- Make sure the safety tab on the cassette is in place.

Poor or distorted playback, recording or erasing quality.

- Clean the heads by using dry- or wet-type cleaning cassette (available separately) after every 10 hours of use, before you start an important recording, or after playing an old tape. Failure to clean the tape heads can cause degraded sound quality or an inability of the unit to record or play tapes. For details, refer to the instructions of the cleaning cassette.

- The TYPE II (high position) or TYPE IV (metal) tape is being used. Use TYPE I (normal) tape only.

- Demagnetize the heads using a commercially available tape head demagnetizer.

- Replace all the batteries with new ones if they are weak.

USB device

Recording to an USB device cannot be started.

- The following problems may have occurred.
 - The USB device is full.
 - The number of MP3 files and folders on the USB device has reached the maximum limit.
 - The USB device is write-protected.

Recording stopped before completion.

- You are using an unsupported USB device. See “Playable/Recordable USB devices” (on this page) for the supported device types.
- The USB device is not formatted correctly. Refer to the USB device operation manual for details on how to format the USB device.
- Turn off the unit and remove the USB device. If the USB device has a power switch, turn the USB device off and then on again after removing it from the unit. Then perform recording again.
- If recording and erase operations are repeated several times, the file structure within the USB device becomes complex. Refer to the USB device operation manual for details on how to deal with this problem. If the problem persists, contact your nearest Sony dealer.

Recording to a USB device results in an error.

- You are using an incompatible USB device. See “Playable/Recordable USB devices” for a list of the devices that are supported.
- Turn off the unit and remove the USB device. If the USB device has a power switch, turn the USB device off and then on again after removing it from the unit. Then perform recording again.
- The USB device was disconnected or the power was turned off during recording. Delete the partially recorded file and record it again. If this does not solve the problem, the USB device may be broken. Refer to the USB device operation manual for details on how to deal with this problem. If the problem persists, contact your nearest Sony dealer.

MP3 files or folders on the USB device cannot be erased.

- Check whether the USB device is write-protected or not.
- The USB device was disconnected or the power was turned off during the erase operation. Delete the partially-erased file. If this does not solve the problem, the USB device may be broken. Refer to the USB device operation manual for details on how to deal with this problem. If the problem persists, contact your nearest Sony dealer.

Are you using a compatible USB device?

- If you connect an incompatible USB device, the following problems may occur. See “Playable/Recordable USB devices” for a list of the device that are supported.
 - The USB device is not recognized.
 - File or folder names are not displayed on this unit.
 - Playback is not possible.
 - The sound skips.
 - There is noise.
 - The sound output is distorted.
 - Recording stops before completion.

“OVER CURRENT” appears.

- An abnormal level has been detected in the electrical current from the ↔ (USB) port **[3]**. Turn off the unit and remove the USB device from the ↔ (USB) port **[3]**. Make sure there is no problem with the USB device. If this message persists, contact your nearest Sony dealer.

There is no sound.

- The USB device is not connected correctly. Turn off the unit and reconnect the USB device. Then turn on the unit and check whether the “USB MEMORY” lights up or not in the display.

There is noise, skipping, or distorted sound.

- Turn off the unit and reconnect the USB device. Then turn on the unit again.
- The music data itself contains noise, or the sound is distorted. Noise may have entered during the recording process. Delete the file and try recording it again.