




Preparation

The battery pack

- 1 Charge the battery pack until the CHARGE lamp lights off.

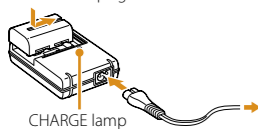

 
- 2 Insert the battery pack into the camera.

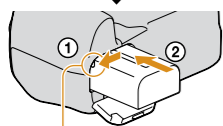

Firmly insert the battery pack all the way while pressing the lock lever with the tip of the battery.

The lens


- 1 Remove the caps.

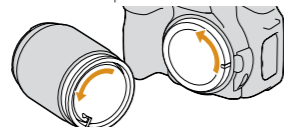

- Do not touch inside parts.
- If dust enters the camera, it may appear on the photo image. Do not leave the camera and lens without the caps. When you change the lens, do it quickly in a location free from dust.



- 2 Attach the lens.

- 1 Align the marks.

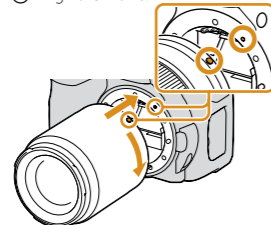

- 2 Turn the lens until it clicks.

The memory card

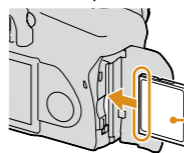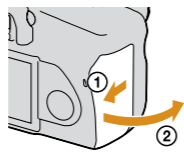


Face side with a label




- When inserting a memory card, turn the camera off.
- For available memory cards, refer to the Instruction Manual.

Date/time setup

- 1 Turn the camera on.

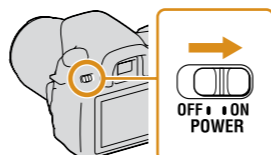


- 2 Set up the date/time.

 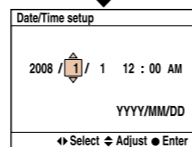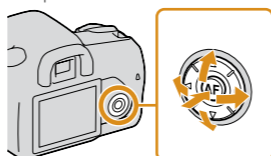

Shooting


- 1 Set the mode dial to AUTO.

- Check that the LIVE VIEW/OVF switch is set to "LIVE VIEW."

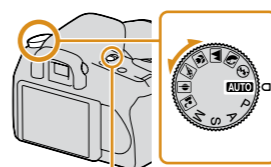

LIVE VIEW/OVF switch

- 2 Check the subject on the LCD monitor.

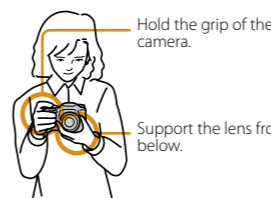


Hold the grip of the camera.

Support the lens from below.

- 3 Press the shutter button halfway down to focus.


- Pressing the shutter button halfway down and holding it activates the autofocus.

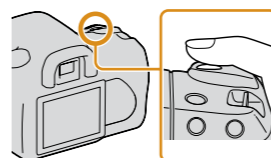

- 4 Press the shutter button fully down to shoot.



Playback

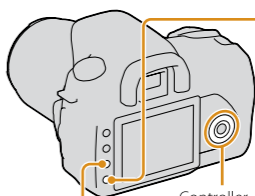

Press .



To play back a previous or next image: press on the controller.

To return to the shooting mode: .

To delete the image

Press .

To fully enjoy the features of your single lens reflex camera, consult the "Instruction Manual."