


SONY Remote Commander

Operating Instructions
CCC
KKK
AAA


RM-V3E

Sony Corporation © 1998 Printed in Malaysia


A

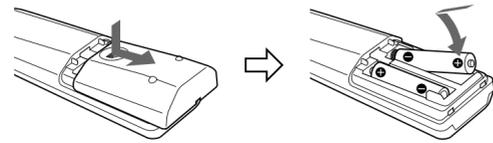

B

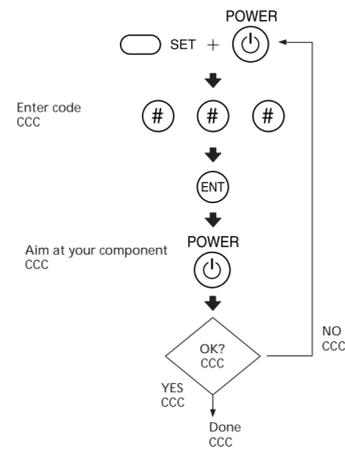

C

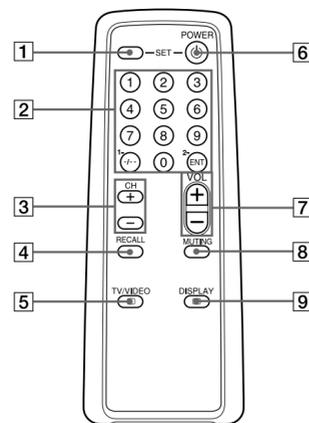

Installing the Batteries (iii. A)

Slide open the battery compartment and insert two size AA batteries (not supplied). Be sure to line up the and on the batteries with the and on the battery compartment.

When to replace the batteries

Under normal conditions, batteries will last up to six months. If the Commander does not operate properly, the batteries might be worn out. Replace the batteries with new ones.

Notes

- Replace both batteries with new ones.
- Do not take more than 20 minutes to replace the batteries; otherwise, your setting of the code numbers will be erased.

Notes on Batteries

- Do not mix old batteries with new ones or mix different types of batteries together.
- If the electrolyte inside the battery should leak, wipe the contaminated area of the battery compartment with a cloth and replace the old batteries with new ones. To prevent the electrolyte from leaking, remove the batteries when you plan to not use the Commander for a long period of time.

Setting the Code (iii. B)

This Remote Commander is preset at the factory to operate Sony brand TVs (using code No.101). If you're using this Commander with a Sony brand TV, you won't need to preset the Commander before you start using it.

To set up the Commander to use with other (non-Sony) manufacturers' TV, you'll need to follow the instructions below to preset the Remote Commander with the correct code number for your TV.

Notes

- The Commander can be set up to operate only one TV at a time – unless their code numbers happen to be the same. For example, you cannot set up the Commander to operate a Sony TV and a Panasonic TV at the same time (because they use different code numbers).
- You may not be able to operate even a Sony brand TV with the factory setting. In such a case, follow the procedures below.

Step 1: Entering the Code Number

- 1 See the supplied "Component Code Numbers" and find the three-digit code number for your TV.

If more than one code number is listed, use the number that's listed first to complete the steps that follow.

For example, if you're setting up a Philips TV, you would use code number 111. If your TV is not listed, see "Searching for the Correct Code".

- 2 Press the POWER button while pressing the SET button.



- 3 Enter the TV's code number.

For example, if you're entering the code for a Philips TV, you would press and release 1, then press and release 1, and then press and release 1.



- 4 Press and release the ENT (Enter) button to store the code number in the Commander's memory.



- 5 Go to "Step 2: Checking if the Code Number Works" to finish setting up.

Step 2: Checking if the Code Number Works


- 1 Power on the TV using the TV's power switch.

- 2 Aim the Remote Commander at the TV and press the POWER button.



The TV should power off.

- 3 When the TV powers off, check that the Commander is operating the other functions of your TV, such as channel and volume control.

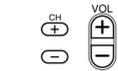

If the Commander Doesn't Seem to Be Working...

- First, try repeating these setup procedures using the other codes listed for your TV.
- If – after trying all the codes listed for your TV – you still cannot get the Commander to work properly, try the search method described under "Searching for the Correct Code".
- If you still cannot get the Commander to work properly, see "Troubleshooting".

If the Commander Seems to Be Working Properly...

- You're finished setting up the Commander for this component.

Searching for the Correct Code

If you've tried all the code numbers listed for your TV and you still cannot get the Commander to work (or if your TV is not listed), try these steps.

- 1 Power on the TV you want to set up with its power switch.

- 2 Press the POWER button while pressing the SET button.



- 3 Press and release the CH + button. Then press and release the POWER button.




- 4 Repeat step 3 until the correct code is found. Pressing CH + and POWER repeatedly will try every available code until the correct one is found. Be patient as you do this; it may take about 150 tries until the correct code number is located.

- 5 When the power of the TV goes off, press and release the ENT (Enter) button to store the code number in the Commander's memory.



- 6 Check that the Commander is operating the other functions of your TV. Press the channel and volume control buttons. If it seems to be working properly, you're done setting up the Commander.

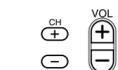

If you still cannot get the Commander to work properly, see "Troubleshooting".

Operating a Component

- 1 Point the Commander directly at the TV.
- 2 Press the button for the function you want to use. See "Remote Button Descriptions" for complete descriptions of the buttons on the Commander.

Notes on Using the Remote Commander

- Basically, use this Commander in the same way as the Commander supplied with your TV.
- Using this Commander will not increase the functions of your TV. The functions of the Commander are limited to the functions of the components themselves. For example, if your TV does not have a Recall function, the RECALL button on this Commander will not function with your TV.
- Some functions of your TV may not work with this Commander.

Remote Button Descriptions (iii. C)

Operating a TV

- 1 To set up the commander. To set up, press POWER while pressing SET.
- 2 To change the channel. The functions of each button vary depending on your TV.
 - 0 - 9 buttons: To select the number. Also to turn on the TV.
 - ENT button: To press after the 0 - 9 buttons to change the channel. (For example, to go to channel 5, press 5 and then ENT.)
 - 1- and 2- buttons: To select a number between 10 and 19, and 20 and 29.
 - +/- button: To select double digit numbers.
- 3 channel up: +
channel down: -
- 4 To work as the JUMP, FLASHBACK or CHANNEL RETURN button, depending on the TV's brand.
- 5 To change the input mode.
- 6 To turn on/off, or turn off the TV. (Varies depending on your TV. If your TV does not turn on by pressing this button, try pressing the 0 - 9 buttons.)
- 7 volume up: +
volume down: -
- 8 To mute volume on TV. Press again to turn muting off.
- 9 To display the current channel on TV, or to turn on the TV. (The function of this button varies depending on your TV.)

Troubleshooting

If you're having problems setting up or using the Remote Commander:


- When setting up the Commander, carefully go through the procedures described under "Setting the Code". If the code that's listed first for your TV doesn't work, try all the codes listed for your TV – in the order in which they're listed. If all the codes fail to work (or if your TV is not listed in this manual), try using the procedures under "Searching for the Correct Code".
- Check that you're aiming the Commander directly at the TV, and that there are no obstructions between the Commander and the TV.
- Make sure the batteries you're using are not worn out, and that they're inserted correctly.
- Check that the TV has infrared remote capability. For example, if your TV didn't come with a remote, it probably isn't capable of being controlled by a Remote Commander.

Specifications


Operable distance	Approx. 7 m (23 ft.) (varies depending on the component of each manufacturer)
Power requirements	Two R6 (size AA) batteries (not supplied)
Battery life	Approx. 6 months (varies depending on frequency of use)
Dimensions	54 × 141 × 22 mm (w/h/d) (2 1/4 × 5 5/8 × 7/8 in.)
Mass	Approx. 80 g (2.8 oz.) (not including batteries)

Design and specifications are subject to change without notice.


A

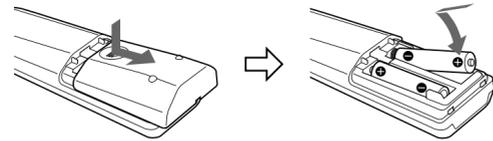

B

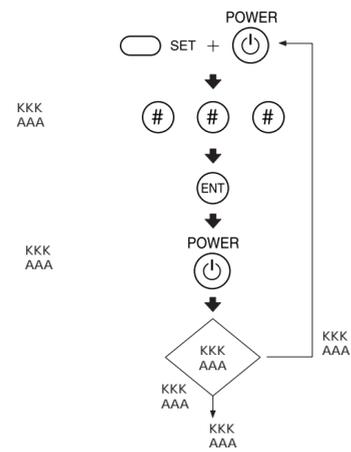

C

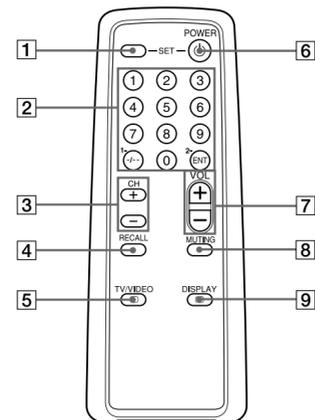

KKK

AAA

