

# Portable CD Player

---

## Operating Instructions

### About the area code

The area code of the location in which you purchased the CD player is shown on upper left of the bar code label on the package.

For accessories supplied with your CD player, check the area code of your model and see "Accessories (supplied/optional)."



*D-E880*

*D-EJ815*

## WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.

### CAUTION

The use of optical instruments with this product will increase eye hazard.

### Owner's Record

The model number is located at the rear and the serial number is located inside the lid of the CD player. Record these numbers in the spaces provided below. Refer to them whenever you call upon your Sony dealer regarding this product.

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

Certain countries may regulate disposal of the battery used to power this product. Please consult with your local authority.

### For the customers in the USA and Canada

This mark is available in the USA and Canada only

### RECYCLING NICKEL-CADMIUM BATTERIES

Nickel-Cadmium batteries are recyclable. You can help preserve our environment by returning your unwanted batteries to your nearest point for collection, recycling or proper disposal.

**Note:** In some areas the disposal of nickel-cadmium batteries in household or business trash may be prohibited.

RBRC (Rechargeable Battery Recycling Corporation) advises you about spent battery collection by the following phone number.

**Call toll free number: 1-800-822-8837 (United States and Canada only)**

**Caution:** Do not handle damaged or leaking nickel-cadmium batteries.



## INFORMATION

Listening for many hours at maximum volume may damage your hearing.

### For the customers in the USA

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

### For the customers in Australia

The supply cord of the AC power adaptor cannot be replaced; if the cord is damaged, the AC power adaptor should be discarded.

### For the customers in Europe



The CE mark on the CD player is valid only for products marketed in the European Union.

# Table of Contents

## **Getting started**

|                             |   |
|-----------------------------|---|
| Locating the Controls ..... | 4 |
|-----------------------------|---|

## **Playing a CD**

|                                 |   |
|---------------------------------|---|
| 1. Connect your CD player. .... | 7 |
| 2. Insert a CD. ....            | 7 |
| 3. Play a CD. ....              | 8 |

## **Playback options**

|                                                           |    |
|-----------------------------------------------------------|----|
| Playing tracks repeatedly (Repeat play) ....              | 11 |
| Playing a single track (Single play) .....                | 11 |
| Playing tracks in random order<br>(Shuffle play) .....    | 11 |
| Playing tracks in your favorite order<br>(PGM play) ..... | 12 |

## **Available features**

|                                            |    |
|--------------------------------------------|----|
| G-PROTECTION function .....                | 13 |
| Emphasizing the bass sound (SOUND) ....    | 13 |
| Protecting your hearing (AVLS) .....       | 14 |
| Locking the controls (HOLD) .....          | 14 |
| Turning off the operation beep sound ..... | 15 |
| Turning off the LCD's backlight .....      | 15 |

## **Connecting your CD player**

|                                     |    |
|-------------------------------------|----|
| Connecting a stereo system .....    | 16 |
| Using your CD player in a car ..... | 17 |

## **Connecting a power source**

|                                                                                         |    |
|-----------------------------------------------------------------------------------------|----|
| Using the rechargeable batteries .....                                                  | 18 |
| Using dry batteries .....                                                               | 19 |
| Using the battery case<br>(for the customers supplied with the<br>battery case) .....   | 20 |
| Notes on the power source .....                                                         | 21 |
| Using the carrying case<br>(for the customers supplied with the<br>carrying case) ..... | 21 |

## **Additional information**


|                                       |    |
|---------------------------------------|----|
| Precautions .....                     | 22 |
| Maintenance .....                     | 22 |
| Troubleshooting .....                 | 23 |
| Specifications .....                  | 25 |
| Accessories (supplied/optional) ..... | 26 |

# Getting started


## Locating the Controls

For details, see pages in parentheses.



### CD player (front)

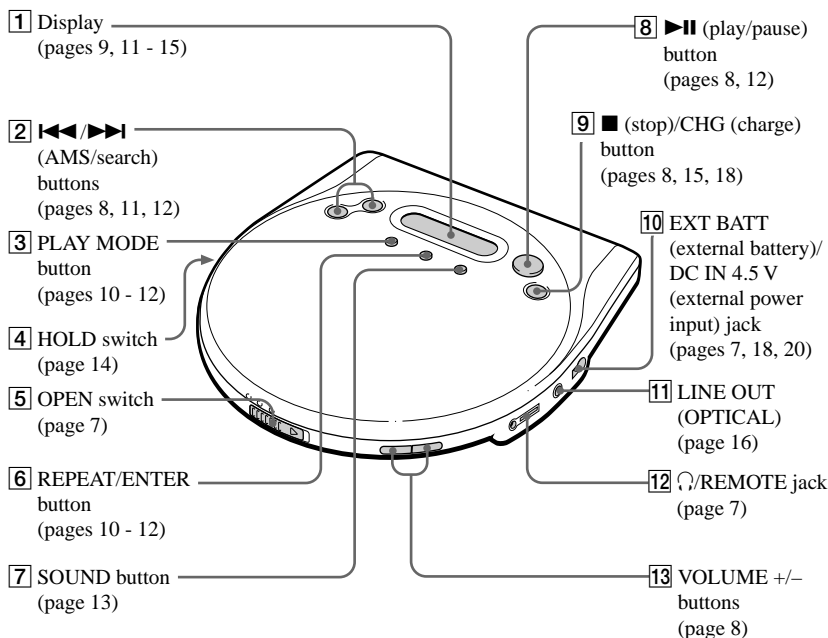

### CD player (rear)

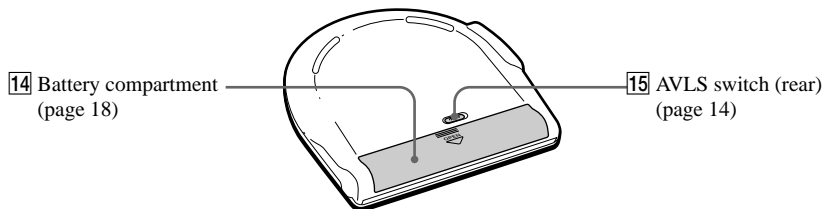


## Remote control (not supplied with the CA model)

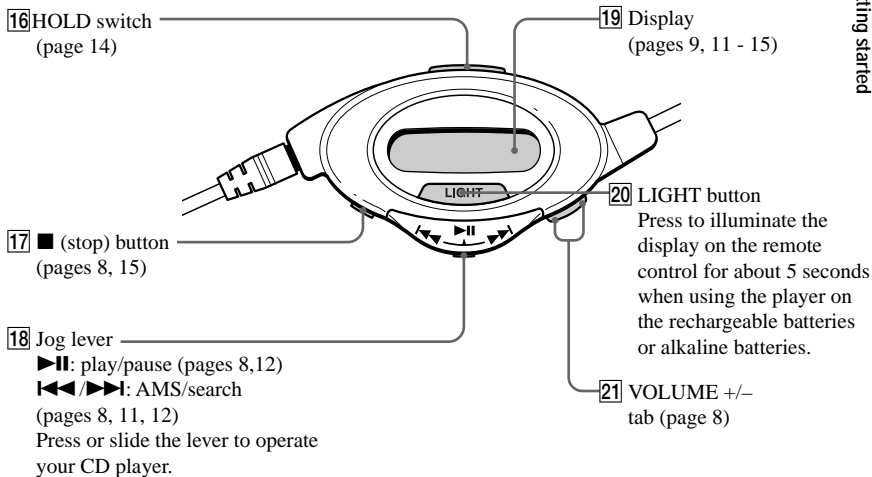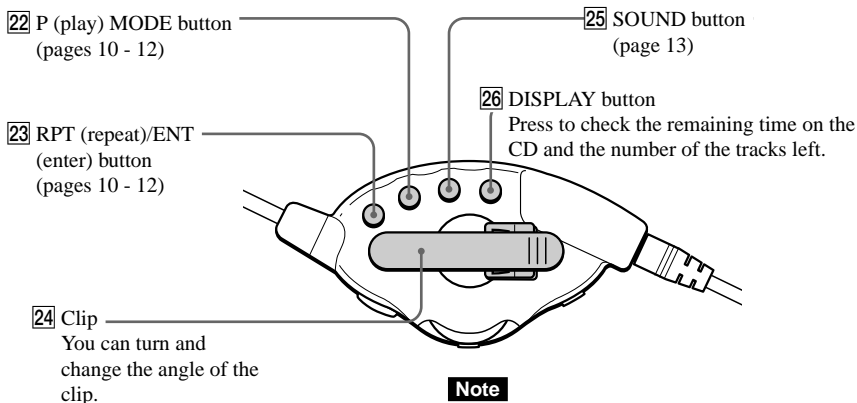**(Front)****(Rear)****Note**

Use only the supplied remote control. You cannot operate this CD player with the remote control supplied with other CD players.

(Continued)

## Remote control (supplied with the CA model)

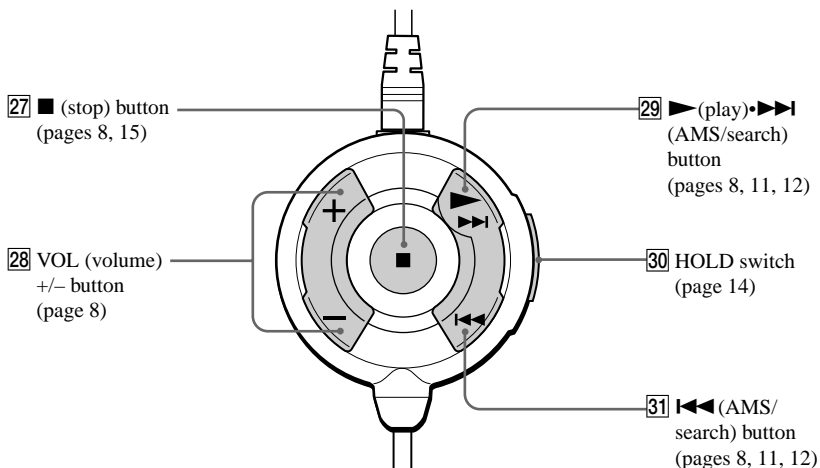

## Setting the maximum volume level

- 1 Set VOL (volume) on the remote control to maximum.
- 2 Adjust the volume on the CD player to the level that you want it to be.  
This level becomes the maximum volume for the remote control.

### **Note**

Use only the supplied remote control. You cannot operate this CD player with the remote control supplied with other CD players.

# Playing a CD

You can also use rechargeable batteries, dry batteries and a car battery as a power source.

## 1. Connect your CD player.


- 1 Connect the AC power adaptor.
- 2 Connect the headphones/earphones with remote control.

### For models supplied with the AC plug adaptor

If the AC power adaptor does not fit the AC outlet, use the AC plug adaptor.


### For models supplied with the remote control.

- Connect the plug of the headphones/earphones to the remote control.
- Connect the headphones/earphones to the remote control firmly. A loose connection may cause noise during playback.

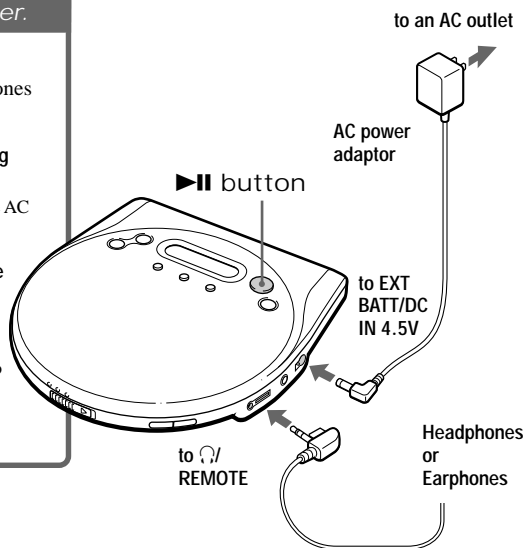


## 2. Insert a CD.


- 1 Slide OPEN to open the CD player lid.

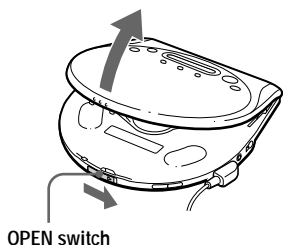

- 2 Place the CD on the tray and close the lid.

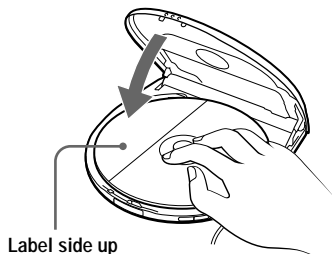

### 3. Play a CD.

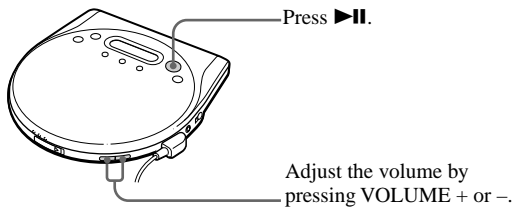

| To                                                | Press                    |
|---------------------------------------------------|--------------------------|
| Play/Pause                                        | <b>▶  </b>               |
| Stop                                              | <b>■/CHG</b> *2          |
| Find the beginning of the current track (AMS*1)   | <b>◀◀</b> once quickly*2 |
| Find the beginning of the previous tracks (AMS)   | <b>◀◀</b> repeatedly*2   |
| Find the beginning of the next track (AMS)        | <b>▶▶</b> once quickly*2 |
| Find the beginning of the succeeding tracks (AMS) | <b>▶▶</b> repeatedly*2   |
| Go backwards quickly                              | Hold down <b>◀◀</b> *2   |
| Go forward quickly                                | Hold down <b>▶▶</b> *2   |

\*1 Automatic Music Sensor

\*2 These operations can be done during both play and pause.



## About the display

- When you press ►|| after changing the CD or turning off and on the player, the total number of tracks in the CD and total playing time appear for about two seconds.
- During play, the track number and the elapsed playing time of the current track appear.
- Between tracks, the time to the beginning of the next track appears with the “-” indication.
- During pause, the elapsed playing time flashes.

## If the volume level does not increase


Is AVLS set to “LIMIT”? Set AVLS to “NORM.” For details, see “Protecting your hearing (AVLS).”

## Playback starts from the point you stopped

Your CD player can recall the playback point where you stopped and then resume playing from the same place (resume function). There is no ON/OFF switch of the resume function on this CD player.

## Removing the CD

Remove the CD as illustrated below.

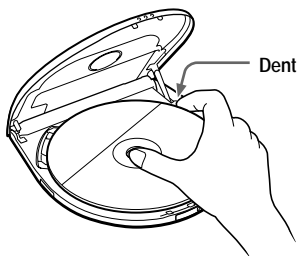

# Playback options

You can enjoy various ways of playback using PLAY MODE and REPEAT/ENTER.

## PLAY MODE button

Each time you press the button, you can change the playback mode.

“No indication”  
(Normal play)



“1”  
(Play a single track)



“SHUF”  
(Play tracks in random order)



“PGM”  
(Play tracks in your favorite order)




## REPEAT/ENTER button

### REPEAT

You can repeat play that is selected using PLAY MODE.

### ENTER

You can select tracks for PGM play mode.

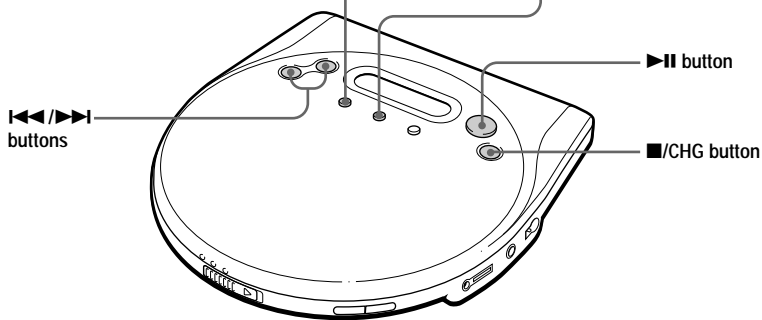


---

## Playing tracks repeatedly (Repeat play)

 You can play tracks repeatedly in normal, single, shuffle and PGM play modes.

---

**During playback, press REPEAT/ENTER.**



---


### Note on I◀◀/▶▶I

 During Repeat play, you can locate the first track after the last track by pressing ▶▶I repeatedly. You can also locate the last track after first track by pressing I◀◀ repeatedly.

---

## Playing a single track (Single play)

**During playback, press PLAY MODE repeatedly until "1" appears.**



---

## Playing tracks in random order (Shuffle play)

**During playback, press PLAY MODE repeatedly until "SHUF" appears.**




## Playing tracks in your favorite order (PGM play)

You can program the CD player to play up to 64 tracks in your favorite order.

- 1** During playback, press **PLAY MODE** repeatedly until “PGM” appears.



- 2** Press **◀◀** or **▶▶** to select a track.

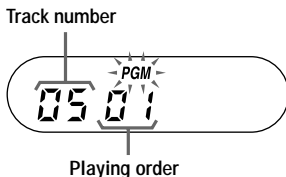

- 3** Press **REPEAT/ENTER** to enter the selected track.  
“00” appears and the playing order increases by one.



- 4** Repeat steps 2 and 3 to select the tracks in your favorite order.

- 5** Press **▶||** to start the PGM play.

To check the program

### During programming:

Press **REPEAT/ENTER** repeatedly before step 5.

### During the PGM play:

Press **PLAY MODE** repeatedly until “PGM” flashes, then press **REPEAT/ENTER**. Each time you press **REPEAT/ENTER**, the track number appears.

### Notes

- When you finish entering the 64th track in step 3, the first selected track appears in the display.
- If you select more than 64 tracks, the first selected tracks are erased.

## G-PROTECTION function

The G-PROTECTION function has been developed to provide excellent protection against sound skipping while jogging. This function provides a higher level of shock protection than the traditional one. While jogging, be sure to hold your CD player with the OPEN switch facing upward. There is no ON/OFF switch of the G-PROTECTION function on this CD player and its remote control. You can always enjoy high quality CD sound using the G-PROTECTION function.

### Note


Sound may skip if:

- the CD player receives stronger continuous shock than expected or
- a dirty or scratched CD is played.

## Emphasizing the bass sound (SOUND)

You can emphasize the bass-boosted sound.

Press **SOUND** to select “**BASS ■■**” or “**BASS ■■■**.”

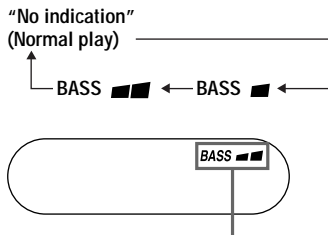

The selected sound mode is displayed.

“**BASS ■■■**” enhances the bass sound more than “**BASS ■■**”.

### Note

If the sound is distorted when using the SOUND function, turn down the volume.

 
---

## Protecting your hearing (AVLS)

The AVLS (Automatic Volume Limiter System) function keeps down the maximum volume to protect your hearing.

---

### Set AVLS to "LIMIT."



Flashes when the volume is turned up and beyond a certain level.

---

### To turn off the AVLS function

Set AVLS to "NORM."

 
 
---

## Locking the controls (HOLD)

You can lock the controls on your CD player to prevent accidental button presses.

---

### Slide HOLD in the direction of the arrow.



Displayed when the HOLD function is working.

---

You can use the HOLD function with both the CD player and remote control. You can still operate your CD player using the remote control when HOLD on the remote control is set to off.

---

### To unlock the controls

Slide HOLD in the opposite direction of the arrow.

---

## Turning off the operation beep sound

You can turn off the beep sound that is heard from your headphones/earphones when you operate your CD player.

---

**1 Remove the power source (AC power adaptor, rechargeable batteries or dry batteries) from the CD player.**

---

**2 Connect the power source while pressing ■/CHG.**

---

### To turn on the beep sound

Remove the power source and then connect the power source without pressing ■/CHG.

---

## Turning off the LCD's backlight

While you are using the rechargeable batteries or dry batteries, the LCD's backlight turns on for about 5 seconds every time you press a button. However, you can turn off the backlight to save the battery power.

---

**1 Remove the rechargeable batteries or dry batteries from the CD player.**

---

**2 Insert the batteries while pressing PLAY MODE.**

---

### To turn on the LCD's backlight

Remove the batteries and then insert the batteries without pressing PLAY MODE.


### About the LCD's backlight

The LCD's backlight is always turned on when using the AC power adaptor or car battery.

## Connecting a stereo system

You can listen to CDs through a stereo system and record CDs on a cassette tape and a MiniDisc. For details, see the instruction manual that comes with the connected device.

Be sure to turn off all connected devices before making connections.

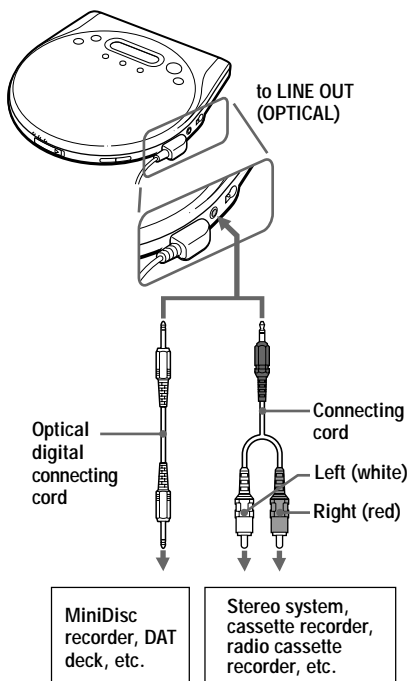

### Notes

- Before you play a CD, turn down the volume of the connected device to avoid damaging the connected speakers.
- Use the AC power adaptor for recording. If you use the rechargeable batteries or dry batteries as a power source, batteries may become completely depleted during recording.
- Adjust the volume properly on the connected device so that the sound will not be distorted.

### When using the connecting cord

- You cannot adjust the volume of the headphones/earphones on the CD player or the remote control.
- If the sound is distorted, connect the device to the  $\text{Ⓜ}$ /REMOTE jack.

### When using the optical digital connecting cord

To record a CD on a MiniDisc, DAT, etc., make sure that the CD player is in pause before operating the recording procedures.

### About the SOUND function when using the connecting cord

See the following table for valid functions according to the types of connecting cord:

|                                 | SOUND |
|---------------------------------|-------|
| Connecting cord                 | No    |
| Optical digital connecting cord | Yes*  |

\* Functions only on the output sound from the  $\text{Ⓜ}$ /REMOTE jack; does not function on the output sound from the LINE OUT (OPTICAL) jack.



## Using your CD player in a car

You can use your CD player in a car by connecting it to the car cassette deck.

You cannot use the car mount plate for this CD player.

When you use your CD player in a car, install it securely in a location that does not interfere with your driving.

### Optional car accessory needed

To connect your CD player to a car cassette deck, you need the following car accessories in "Accessories (supplied/optional)":

- Car battery cord, and
- Car connecting pack\*

For details, see the instruction manuals that come with the optional accessories.

\* Noise may be heard if you use an optional connecting cord. It is recommended that you use a Sony car connecting pack to reduce noise.

### Switched ignition function (when using the car battery cord)

With this feature, your CD player stops automatically when you turn off the car engine (turn off the ignition key) even if the batteries are inserted in the CD player. This function is invalid depending on the car models.

#### Note

Use only the car battery cord listed in "Accessories (supplied/optional)." If you use any other car battery cord, a heat, smoke or malfunction may occur.

## ▶ Connecting a power source

You can use the following power sources:

- Rechargeable batteries
- AC power adaptor (see “Playing a CD”)
- LR6 (size AA) alkaline batteries

For the battery life and charging time of the rechargeable batteries, see “Specifications.”

---


## Using the rechargeable batteries

Charge the rechargeable batteries before using them for the first time. You can use only the following rechargeable batteries for your CD player.

- NC-WMAA
- NH-WM2AA


---

### 1 Open the battery compartment lid.

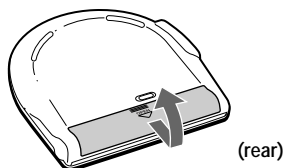

---


### 2 Insert two rechargeable batteries by matching the ⊕ to the diagram in the battery compartment and close the lid.

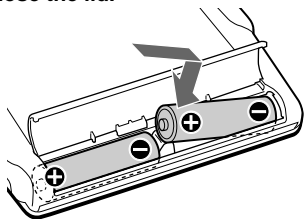




---

### 3 Connect the AC power adaptor to the EXT BATT/DC IN 4.5 V jack of your CD player and an AC outlet, then press ■/CHG to start charging.

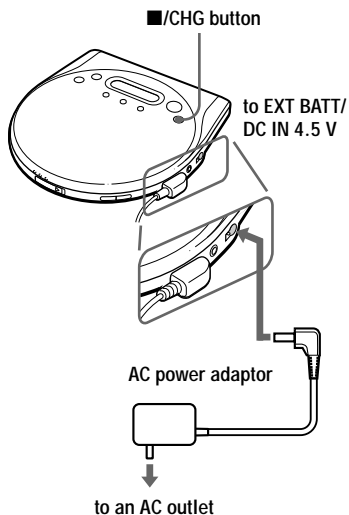If the AC power adaptor does not fit the AC outlet, use the AC plug adaptor.



The CD player charges the batteries. The “CHG” indicator turns on in the display, and the indicator sections of  light up in succession. When the batteries are completely charged, the “CHG” and  indicators turn off.

If you press ■/CHG after the charge has already been completed, the  indicator and “Full” flash.


---

### 4 Disconnect the AC power adaptor.

---


## To remove the rechargeable batteries

Remove the batteries as illustrated below.

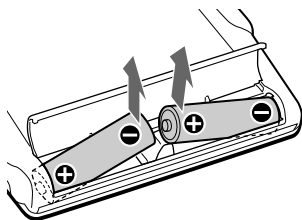

## When to charge the rechargeable batteries

You can check the remaining power of the batteries in the display.

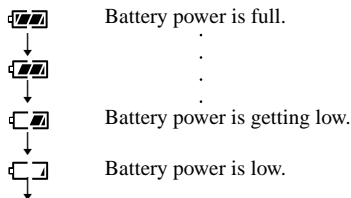



Lo batt\* Batteries are depleted.

\* Beep sounds.

To keep the original battery capacity for a long time, charge the batteries only when they are completely depleted.

### Notes

- The indicator sections of  roughly shows the remaining battery power. One section does not always indicate one-fourth of the battery power.
- Depending on operating conditions, the indicator sections of  may increase or decrease.

## When to replace the rechargeable batteries


If the battery life becomes shorter by about half, replace the batteries with new rechargeable batteries.

## Note on the rechargeable batteries

If the battery is new or has not been used for a long time, it may not be charged completely until you charge and discharge it several times.

## To attach the battery compartment lid

If the battery compartment lid is detached by an accidental drop, excessive force, etc., attach it as illustrated below.

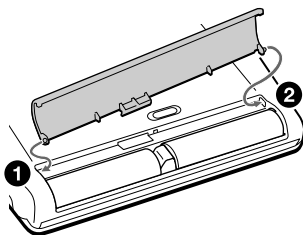

## Using dry batteries

Use only the following dry battery type for your CD player:

- LR6 (size AA) alkaline batteries

### Note

Be sure to remove the AC power adaptor when using the dry batteries.

- 1** Open the battery compartment lid.
- 2** Insert two LR6 (size AA) batteries by matching the  $\oplus$  to the diagram in the battery compartment.

(Continued)


## Using dry batteries

### To remove the batteries

Remove the batteries in the same way as rechargeable batteries.

### When to replace the batteries

You can check the remaining power of the batteries in the display.

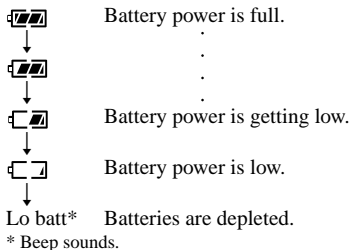


When the batteries are depleted, replace both batteries with new ones.


## Using the battery case (for the customers supplied with the battery case)

You can extend power by inserting the rechargeable batteries or dry batteries in the CD player and attaching the battery case. The batteries in the CD player and battery case are discharged simultaneously.

- 1 Remove the cap of the battery case, and insert two LR6 (size AA) alkaline batteries by matching the ⊕ to the diagram outside the battery case and close the cap of the battery case.**

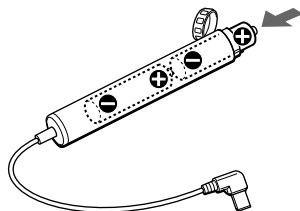

- 2 Connect the battery case to the CD player.**

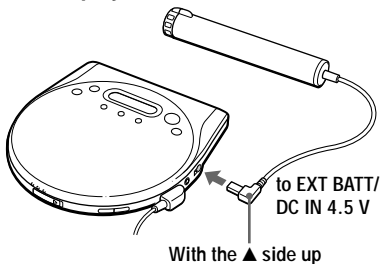

### Notes

- Be sure to remove the AC power adaptor when attaching the battery case.
- When using the rechargeable batteries and dry batteries together to extend power, use fully charged rechargeable batteries and new dry batteries.

## Notes on the power source

Disconnect all power sources when the CD player is not used.

### On AC power adaptor

- Use only the AC power adaptor supplied or recommended in “Accessories (supplied/optional).” Do not use any other AC power adaptor. It may cause a malfunction.

#### Polarity of the plug



- When disconnecting the AC power adaptor from the AC outlet, grasp the adaptor itself. Do not pull it by the cord.
- Do not touch the AC power adaptor with wet hands.


### On rechargeable batteries and dry batteries

- Do not charge the dry batteries.
- Do not throw the batteries into fire.
- Do not carry the batteries with coins or other metallic objects. It can generate heat if the positive and negative terminals of the battery are accidentally contacted by a metallic object.
- Do not mix rechargeable batteries with dry batteries.
- Do not mix new batteries with old ones.
- Do not use different types of batteries together.
- When the batteries are not to be used for a long time, remove them.
- If battery leakage occurs, wipe off any deposit in the battery compartment, and install new batteries. In case the deposit adheres to you, wash it off thoroughly.

## Using the carrying case (for the customers supplied with the carrying case)

You can carry your player and its battery case together using the supplied carrying case.

Insert them into the proper places in the case as illustrated below.

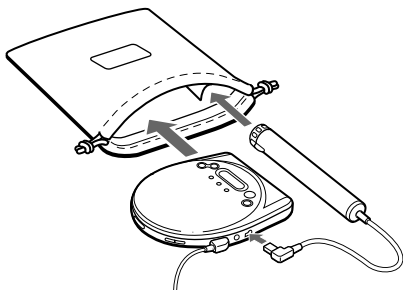

---

## Precautions

### On safety


- Should any solid objects or liquid fall into the CD player, unplug it and have it checked by qualified personnel before operating it any further.
- Do not put any foreign objects in the DC IN 4.5 V (external power input) jack.

### On the CD player

- Keep the lens on the CD player clean and do not touch it. If you do so, the lens may be damaged and the CD player will not operate properly.
- Do not put any heavy object on top of the CD player. The CD player and the CD may be damaged.
- Do not leave the CD player in a location near heat sources, or in a place subject to direct sunlight, excessive dust or sand, moisture, rain, mechanical shock, unlevelled surface, or in a car with its windows closed.
- If the CD player causes interference to the radio or television reception, turn off the CD player or move it away from the radio or television.

### On handling CDs

- To keep the CD clean, handle it by its edge. Do not touch the surface.
- Do not stick paper or tape onto the CD.

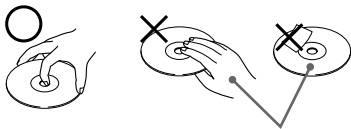

Not these ways

- Do not expose the CD to direct sunlight or heat sources such as hot air ducts. Do not leave the CD in a car parked under direct sunlight.

### On headphones/earphones

#### Road safety

Do not use headphones/earphones while driving, cycling, or operating any motorized vehicle. It may create a traffic hazard and is illegal in some areas. It can also be potentially dangerous to play your headsets at high volume while walking, especially at pedestrian crossings. You should exercise extreme caution or discontinue use in potentially hazardous situations.

#### Preventing hearing damage

Avoid using headphones/earphones at high volume. Hearing experts advise against continuous, loud and extended play. If you experience a ringing in your ears, reduce volume or discontinue use.

#### Consideration for others

Keep the volume at a moderate level. This will allow you to hear outside sounds and to be considerate to the people around you.

---



## Maintenance

### To clean the casing

Use a soft cloth slightly moistened in water or a mild detergent solution. Do not use alcohol, benzine or thinner.

# Troubleshooting

Should any problem persist after you have checked these symptoms, consult your nearest Sony dealer.

| Symptom                                                                                                                                                            | Cause and/or corrective actions                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The volume does not increase even if you press the VOLUME + button repeatedly.                                                                                     | <ul style="list-style-type: none"><li>→ Set the AVLS switch to "NORM." (page 14)</li><li>→ The headphones/earphones are connected to the LINE OUT (OPTICAL) jack. Connect them to the /REMOTE jack. (page 7)</li></ul>                                                                                                                                                                                                              |
| No sound, or noise is heard.                                                                                                                                       | <ul style="list-style-type: none"><li>→ Connect the plugs firmly. (page 7)</li><li>→ Plugs are dirty. Clean the plugs with a dry soft cloth periodically.</li></ul>                                                                                                                                                                                                                                                                                                                                                  |
| The playing time is too short when powered with the dry batteries.                                                                                                 | <ul style="list-style-type: none"><li>→ Check that you are using alkaline batteries and not manganese batteries. (pages 19, 20)</li><li>→ Replace the batteries with new LR6 (size AA) alkaline batteries. (pages 19, 20)</li></ul>                                                                                                                                                                                                                                                                                  |
| The playing time is too short when powered with the rechargeable batteries.                                                                                        | <ul style="list-style-type: none"><li>→ Charge and discharge the rechargeable batteries several times. (pages 18, 19)</li></ul>                                                                                                                                                                                                                                                                                                                                                                                      |
| When you press  , "Lo batt" or "00" appears in the display. The CD does not play. | <ul style="list-style-type: none"><li>→ The rechargeable batteries are used up completely. Charge the batteries. (page 18)</li><li>→ Replace the batteries with new LR6 (size AA) alkaline batteries. (pages 19, 20)</li></ul>                                                                                                                                                                                                                                                                                       |
| "HI dc In" appears in the display.                                                                                                                                 | <ul style="list-style-type: none"><li>→ Use only the AC power adaptor or car battery cord in "Accessories (supplied/optional)." (page 26)</li><li>→ Remove all power sources, then insert the batteries or connect the AC power adaptor again. (pages 7, 18, 19, 20)</li></ul>                                                                                                                                                                                                                                       |
| The CD does not play or "no DISC" appears in the display when a CD is placed in the CD player.                                                                     | <ul style="list-style-type: none"><li>→ The CD is dirty or defective. (page 21)</li><li>→ Check that the CD is inserted with the label side up. (page 7)</li><li>→ Moisture condensation has occurred. Leave the CD player aside for several hours until the moisture evaporates.</li><li>→ Close the lid of the battery compartment firmly. (page 18)</li><li>→ Make sure the batteries are inserted correctly. (pages 18 - 20)</li><li>→ Connect the AC power adaptor to an AC outlet securely. (page 7)</li></ul> |
| "Hold" appears in the display when you press a button, and the CD does not play.                                                                                   | <ul style="list-style-type: none"><li>→ The buttons are locked. Slide the HOLD switch back. (page 14)</li></ul>                                                                                                                                                                                                                                                                                                                                                                                                      |

(Continued)

---

## Troubleshooting

---

| Symptom                                                                                          | Cause and/or corrective actions                                                                                                                                           |
|--------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Cannot adjust the volume with the VOLUME +/- buttons on the CD player.                           | → The CD player is connected to an audio device. Adjust the volume using the volume control on the connected device. (page 16)                                            |
| During recording with optical digital connection, the track number cannot be recorded correctly. | → Record the track number again using the MiniDisc recorder, DAT recorder, etc. (page 16)<br>→ See the instruction manual that comes with the recording device. (page 16) |
| The CD player does not start charging.                                                           | → During stop, press ■/CHG. (page 18)                                                                                                                                     |

---



# Specifications

## System

Compact disc digital audio system

## Laser diode properties

Material: GaAlAs

Wavelength:  $\lambda = 780$  nm

Emission duration: Continuous

Laser output: Less than 44.6  $\mu$ W

(This output is the value measured at a distance of 200 mm from the objective lens surface on the optical pick-up block with 7 mm aperture.)

## D-A conversion

1-bit quartz time-axis control

## Frequency response

20 - 20,000 Hz  $^{+1}_{-2}$  dB (measured by EIAJ CP-307)

## Output (at 4.5 V input level)

Line output (stereo minijack)

Output level 0.7 V rms at 47 kilohms

Recommended load impedance over 10 kilohms

Headphones (stereo minijack)

Approx. 5 mW + Approx. 5 mW at 16 ohms

(Approx. 3 mW + Approx. 3 mW at 16 ohms)\*

\*For the customers in France

Optical digital output (optical output connector)

Output level: -21 - -15 dBm

Wavelength: 630 - 690 nm at peak level

## Power requirements

For the area code of the model you purchased, check the upper left side of the bar code on the package.

- Two Sony NC-WMAA rechargeable batteries: 2.4 V DC
- Two NH-WM2AA rechargeable batteries: 2.4 V DC
- Two LR6 (size AA) batteries: 3 V DC

- AC power adaptor (DC IN 4.5 V jack):  
U2/CA2/E92/MX2 model: 120 V, 60 Hz  
CED/CET/CEW/CEX/CE7/EE/EE1/E13/G5/  
G6/G7/G8 model:  
220 - 230 V, 50/60 Hz  
CEK/3CE7 model: 230 - 240 V, 50 Hz  
EA3 model: 110 - 240 V, 50/60 Hz  
AU2 model: 240 V, 50 Hz  
JE.W/E33 model: 100 - 240 V, 50/60 Hz  
HK2 model: 220 V, 50/60 Hz  
AR1/CN2 model: 220 V, 50 Hz
- Sony DCC-E245 car battery cord for use on car battery: 4.5 V DC

## Battery life\* (approx. hours)

(When you use the CD player on a flat and stable surface.)

Playing time varies depending on how the CD player is used.

|                                                                                                    |    |
|----------------------------------------------------------------------------------------------------|----|
| Two NC-WMAA<br>(charged for<br>about 4 hours**)                                                    | 12 |
| NH-WM2AA<br>(charged for<br>about 4 hours**)                                                       | 25 |
| Two Sony alkaline<br>batteries LR6SG                                                               | 40 |
| Rechargeable batteries<br>NC-WMAA and<br>two alkaline batteries                                    | 49 |
| Rechargeable batteries<br>NH-WM2AA and<br>two alkaline batteries                                   | 63 |
| Two Sony alkaline<br>batteries LR6SG and<br>two Sony alkaline<br>batteries LR6SG<br>(battery case) | 82 |

\* Measured value by the standard of EIAJ  
(Electronic Industries Association of Japan).

\*\* Charging time varies depending on how the rechargeable battery is used.

## Operating temperature

5°C - 35°C (41°F - 95°F)

(Continued)

## Specifications

### Dimensions (w/h/d) (excluding projecting parts and controls)

Approx. 131.5 × 22.5 × 141.4 mm  
(5 1/4 × 29/32 × 5 5/8 in.)

### Mass (excluding rechargeable batteries)

Approx. 200 g (7.1 oz.)

Design and specifications are subject to change without notice.

## Accessories (supplied/optional)

### Supplied accessories

For the area code of the location in which you purchased the CD player, check the upper left side of the bar code on the package.

- AC power adaptor (1)
- Headphones/earphones with remote control (1)
- Rechargeable batteries (2)
- Battery carrying case (1)
- Carrying case (1)
- Battery case (1)\*
- AC plug adaptor (1)\*\*
- \* Supplied with U2, CED, G8, CEK and CEX models
- \*\* Supplied with JE.W and E33 models

### For US customers

 
The AC power adaptor supplied is not intended to be serviced. Should the AC power adaptor cease to function in its intended manner, during the warranty period, the adaptor should be returned to your nearest Sony Service Center or Sony Authorized Repair Center for replacement, or after warranty period, it should be discarded.

## Optional accessories


|                                           |                                                                 |
|-------------------------------------------|-----------------------------------------------------------------|
| AC power adaptor                          | AC-E45HG                                                        |
| Active speaker system                     | SRS-Z1<br>SRS-Z1000                                             |
| Car battery cord                          | DCC-E245                                                        |
| Car battery cord with car connecting pack | DCC-E26CP                                                       |
| Car connecting pack                       | CPA-9                                                           |
| Connecting cord                           | RK-G129HG<br>RK-G136HG                                          |
| Optical digital connecting cord           | POC-5B<br>POC-10B<br>POC-15B<br>POC-5AB<br>POC-10AB<br>POC-15AB |
| Rechargeable battery                      | NH-WM2AA                                                        |
| Earphones                                 | MDR-E848LP<br>MDR-EX70LP                                        |

### When connecting optional headphones/earphones to the supplied remote control

Use only headphones with stereo mini plugs. You cannot use headphones with micro plugs.



Stereo miniplug

 

Micro plug

Your dealer may not handle some of the above listed accessories. Please ask the dealer for detailed information about the accessories in your country.



---

Sony  line <http://www.world.sony.com/>

---

Sony Corporation Printed in Malaysia

---

---