



Quick Setup Guide/快速設定指南

BDV-E980/E880/E380


©2011 Sony Corporation Printed in Malaysia

1 Connect the speakers 連接揚聲器

For BDV-E980/E880, speaker assembly is necessary. Refer to the supplied "Speaker Installation Guide."
對於 BDV-E980/E880，需要組裝揚聲器。請參閱提供的“揚聲器安裝指南”。



To connect speaker cords to the speaker/將揚聲器導線連接到揚聲器

Connect the cord so that the cord's color tube matches the color of the label on the rear of the speaker.
連接導線，使揚聲器背面標籤的顏色對應導線色環。

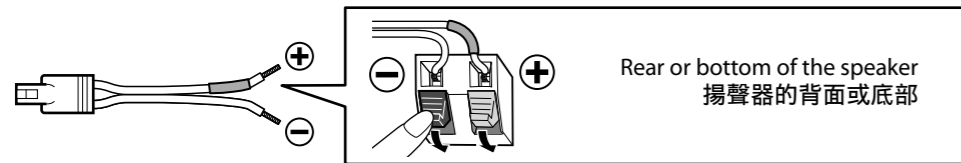

For BDV-E880/E380, this connection is unnecessary for the subwoofer.
對於 BDV-E880/E380，低音揚聲器無需進行此連接。

Connect the speaker cords to match the color of the SPEAKERS jacks of the unit.
將揚聲器導線連接到本機上對應顏色的SPEAKERS插孔。

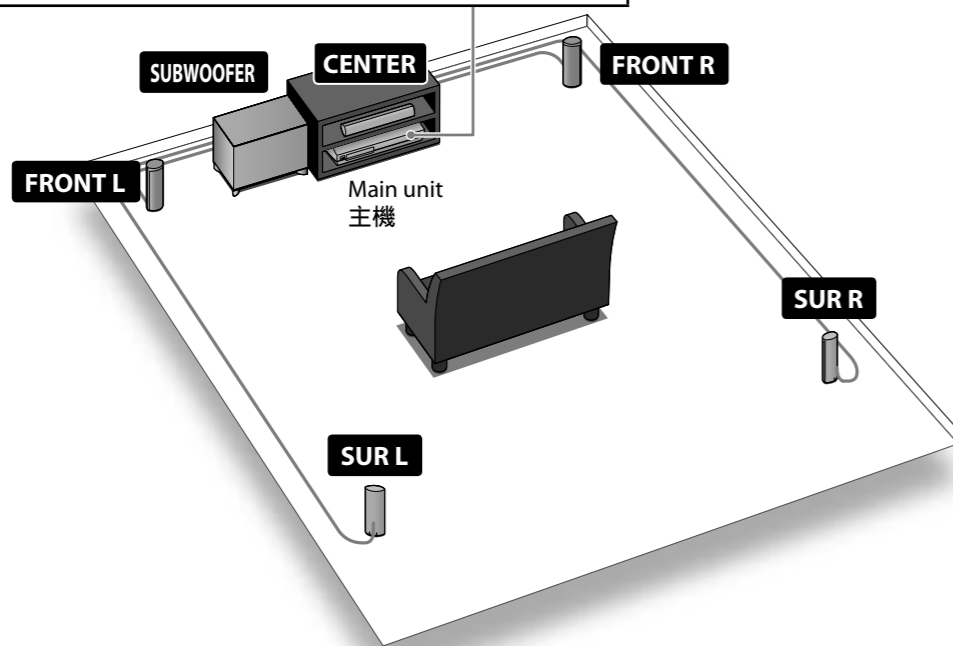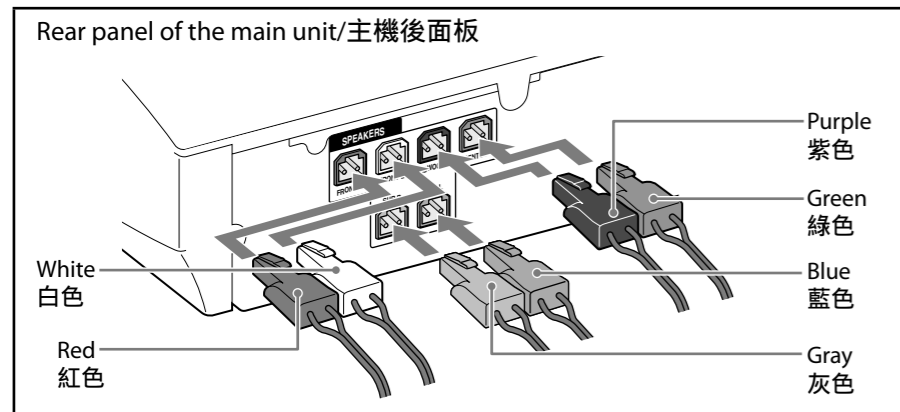


BDV-E380 is the model used for illustration purposes.
BDV-E380 是用於圖示說明的機型。

2-A Connect with HDMI cables (recommended) 用HDMI電纜連接（建議）


For connecting with video cords instead of HDMI cables, see "2-B Connect with video cords" on the reverse side.
如果用視頻線代替 HDMI 電纜連接，請參閱反面的“2-B 用視頻線連接”。

Connecting your TV/連接電視機

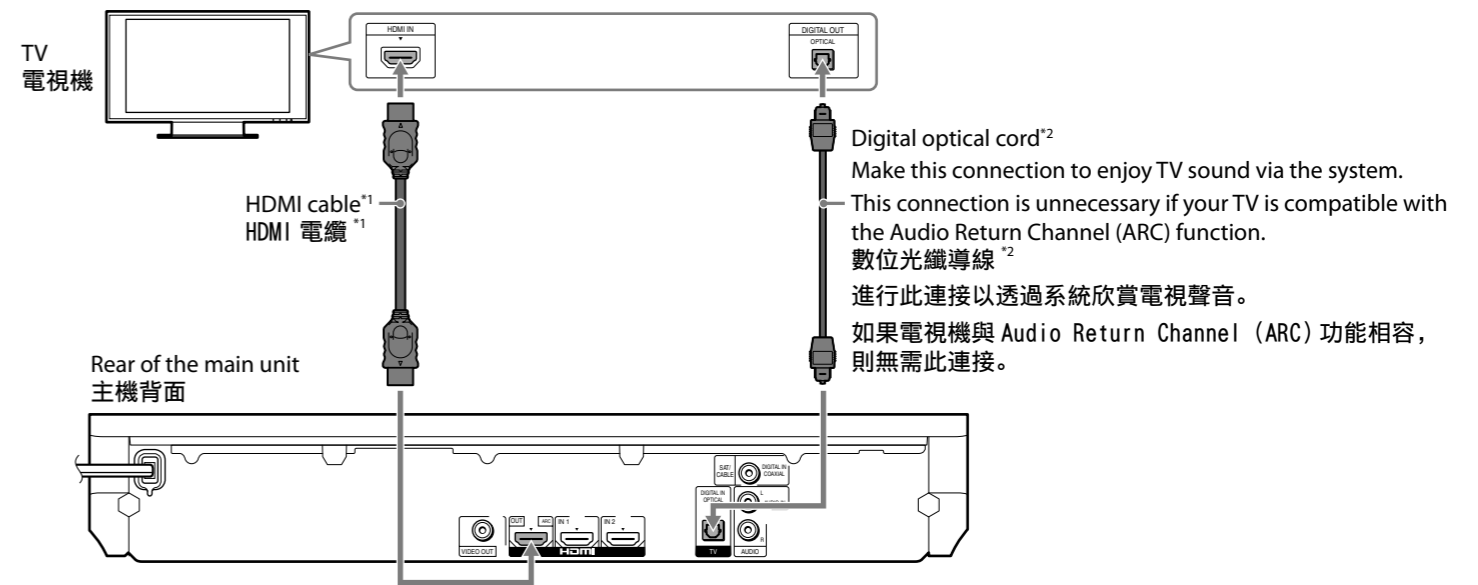

Connecting your set-top box/連接到機上盒

If you do not use a set-top box, skip to "3 Perform "Easy Setup"" on the reverse side.
To enjoy sound from your set-top box, press FUNCTION repeatedly to select "HDMI 1."
如果不使用機上盒，請跳至反面的“3 執行‘簡易設置’”。
若要欣賞來自機上盒的聲音，請反覆按 FUNCTION 選擇“HDMI 1”。

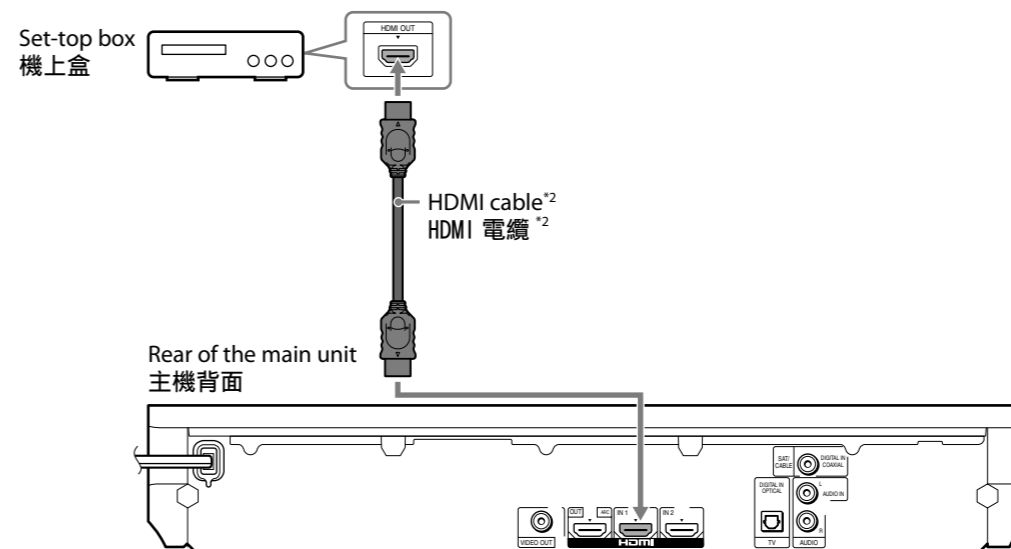


*1 A High Speed HDMI cable is supplied with Singapore and Taiwan models only.
*1 僅新加坡和台灣機型提供高速 HDMI 電纜。
*2 Not supplied./*2 不提供。

2-B Connect with video cords 用視頻線連接

If you completed "2-A Connect with HDMI cables (recommended)," skip to "3 Perform "Easy Setup.""

如果完成“2-A 用 HDMI 電纜連接（建議）”，請跳至“3 執行‘簡易設置’”。

Connecting your TV/連接電視機

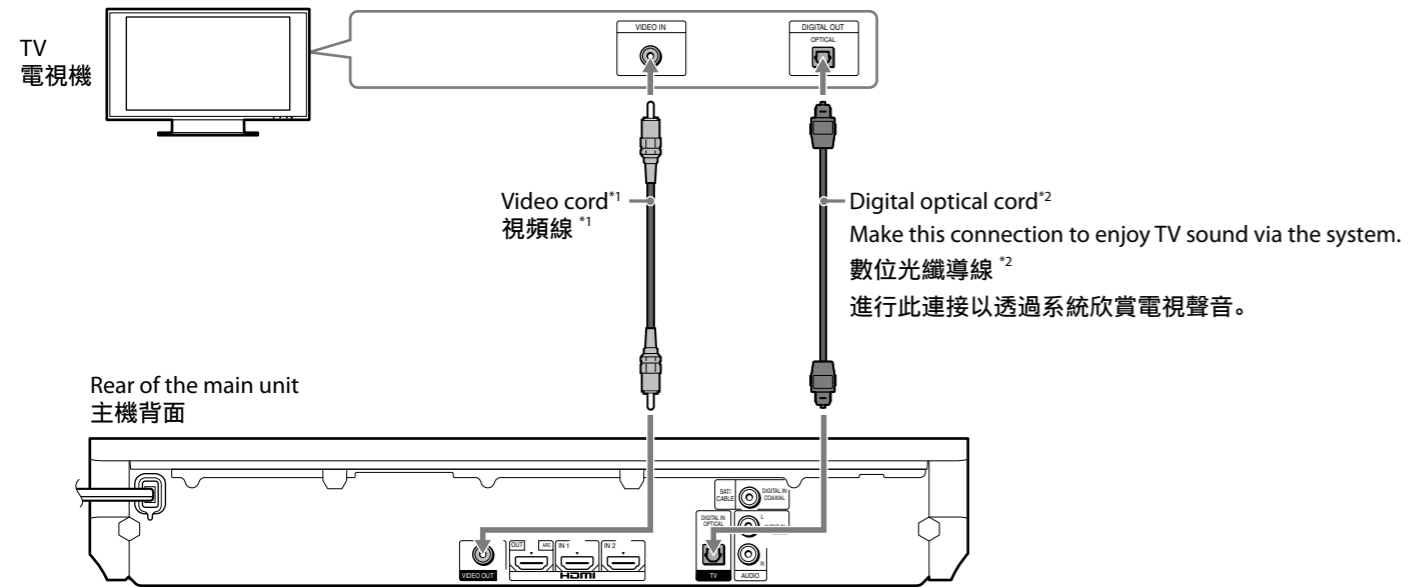


Connecting your set-top box/連接到機上盒

If you do not use a set-top box, skip to "3 Perform "Easy Setup.""

To enjoy sound from your set-top box, press FUNCTION repeatedly to select "SAT/CABLE."

如果不使用機上盒，請跳至“3 執行‘簡易設置’”。

若要欣賞來自機上盒的聲音，請反覆按 FUNCTION 選擇“SAT/CABLE”。

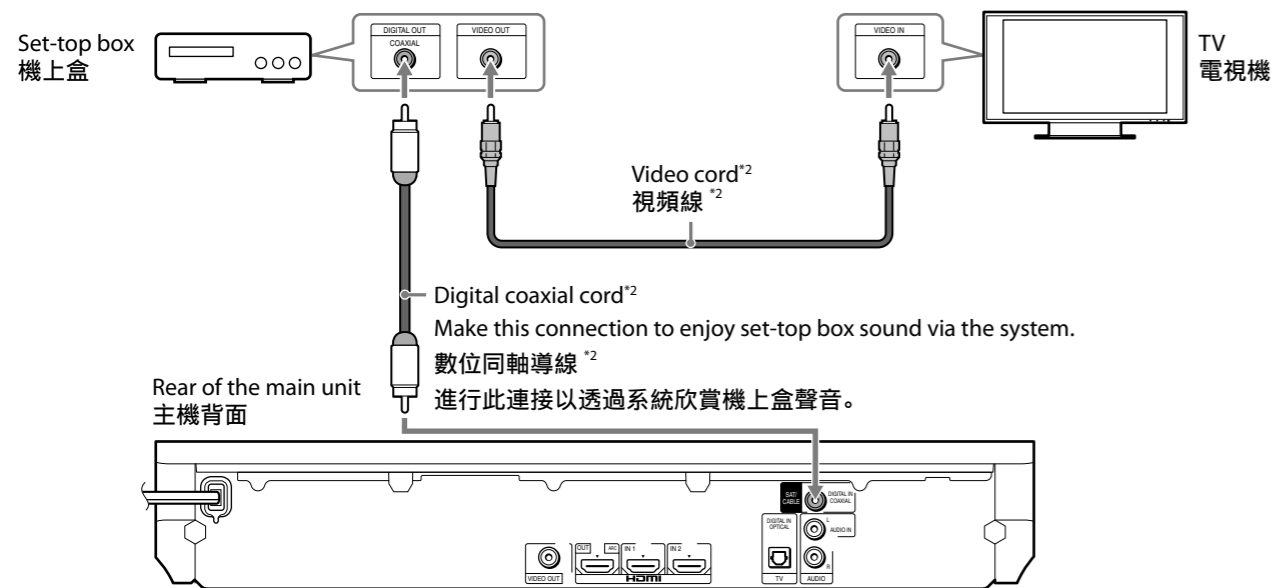

*1 Supplied with Taiwan models only./*1 僅台灣機型提供。

*2 Not supplied./*2 不提供。


3 Perform "Easy Setup" 執行“簡易設置”

Do not insert a disc before performing the "Easy Setup".

執行“簡易設置”前，切勿插入光碟。

1. Insert batteries into the remote.

將電池裝入遙控器。

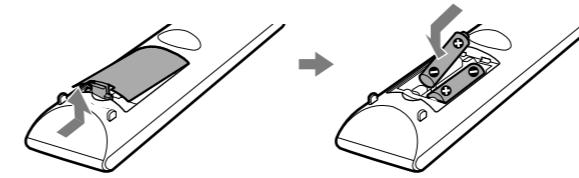


2. Connect the AC power cords of the main unit and your TV to the AC power outlet, and then turn on the power of the main unit and your TV.

將主機與電視機的交流電源線連接至交流電源插座，然後打開主機與電視機的電源。


3. Switch the input selector on your TV so that system screens like the ones below appear on the TV screen.

切換電視機上的輸入選擇器，類似以下畫面的系統螢幕會出現在電視機螢幕上。

Starting up
啓動

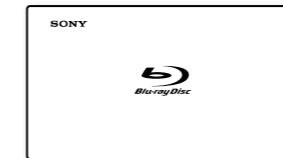


"Easy Setup" screen
“簡易設置”畫面

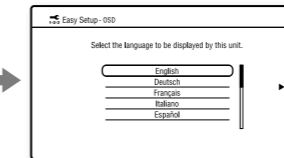

4. Perform basic settings by following the on-screen instructions in "Easy Setup" using ←/↑/↓/→ and ⊕.

使用 ←/↑/↓/→ 和 ⊕，依照“簡易設置”中的畫面指示，執行基本設定。

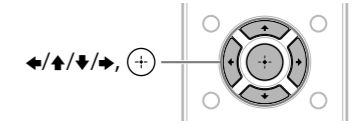

[Easy Setup is now complete.] appears when "Easy Setup" is complete.

“簡易設置”完成時，會出現 [現在簡易設置已經完成。]。



Basic setup is complete. Refer to the supplied Operating Instructions for details on how to enjoy disc playback and many other features.

基本設置完成。有關如何欣賞光碟播放和許多其他功能的詳情，請參閱提供的使用說明書。