




CD/DVD Player


Startup Guide / Guide de démarrage / คู่มือสำหรับเริ่มต้นใช้งาน / دليل بدء التشغيل / راهنمای شروع / 시작 안내서 / 入門指南 / 入门指南

1

A

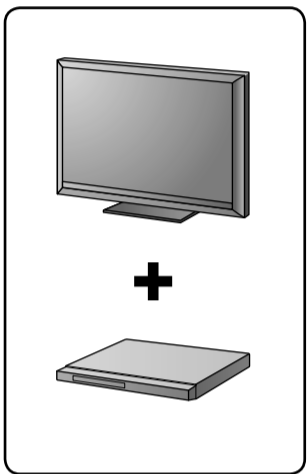


COMPONENT VIDEO & AUDIO

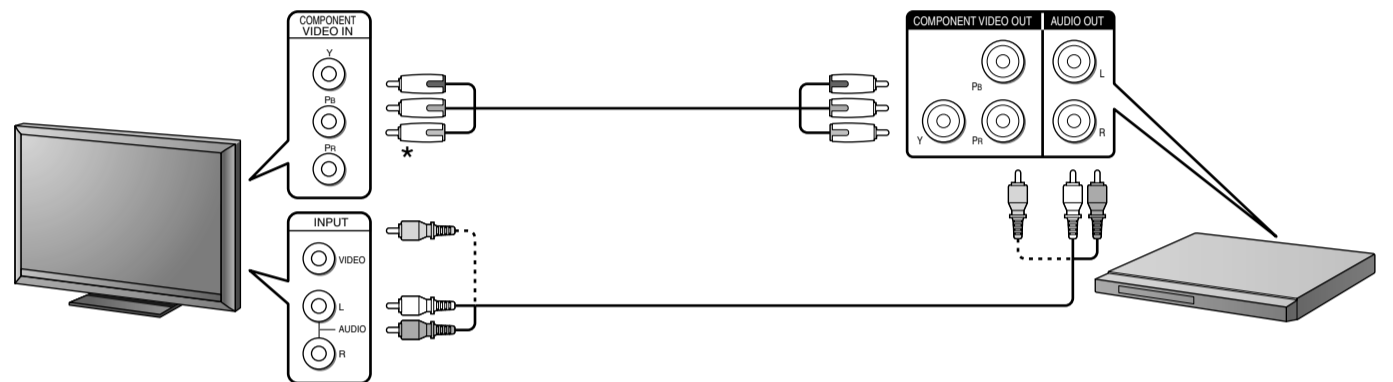


VIDEO & AUDIO



B

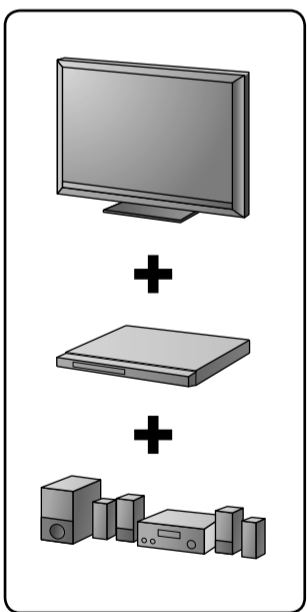


COAXIAL

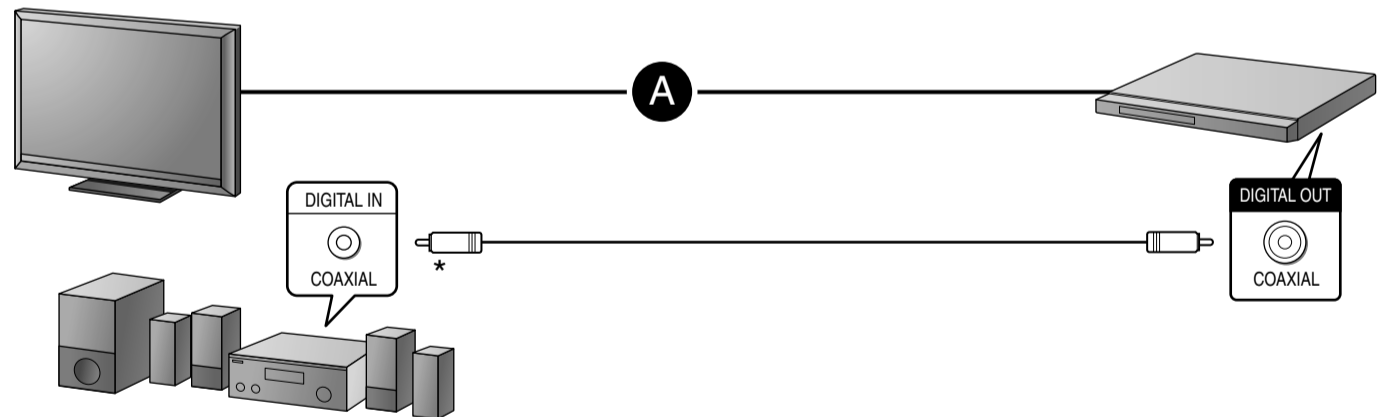


* Not supplied / Non fourni / ไม่นำมาให้ / غير مرفق / ضمیمه نیست / 별매품 / 未提供 / 不提供

2


1

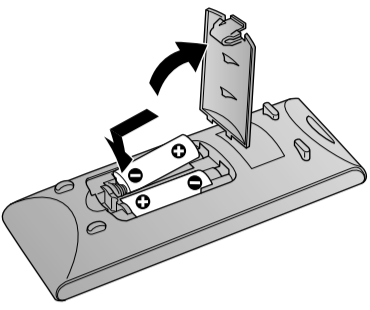


2

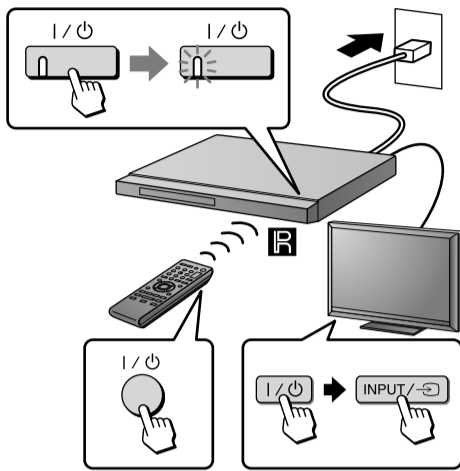

3 NTSC ↔ PAL

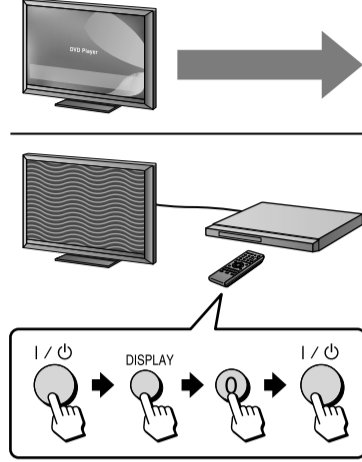


4


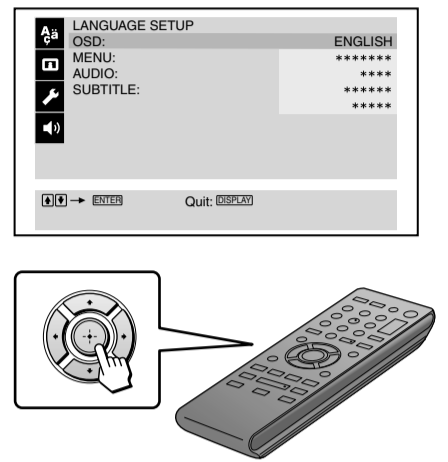


3

1

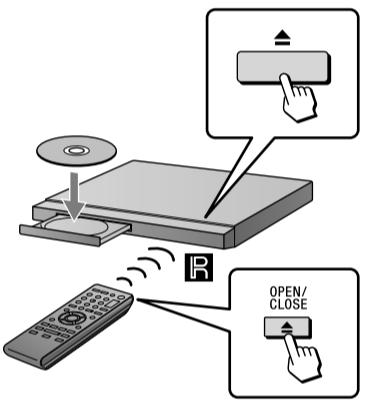

2

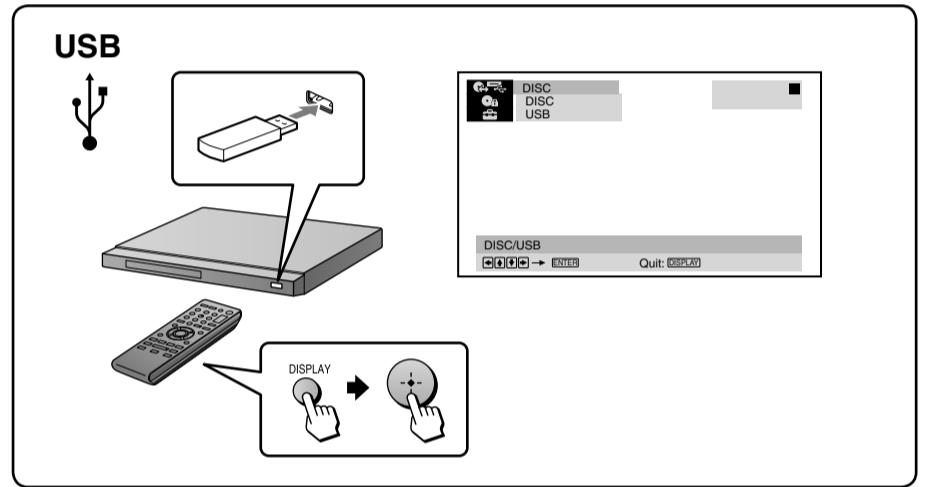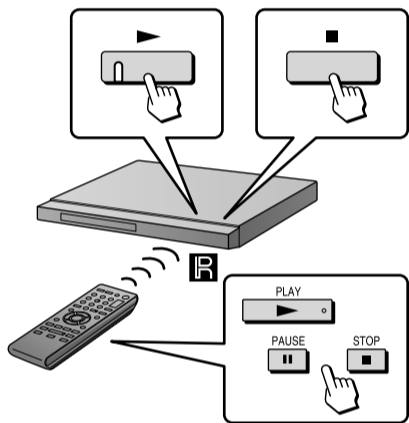

TIME/TEXT

PICTURE NAVI

AUDIO

SUBTITLE

MENU

CHAPTER

DISPLAY

FAST/SLOW PLAY

PLAYBACK CONTROLS