

SONY[®]

Digital HD Video Camera Recorder

HDR-AS15

The following describes the functions provided/changed by this firmware update, and how to operate them.

Please refer to the “Operating Guide,” and the “Handbook”.

Switching Copy mode/ Remote control mode



During smart remote control operation, you can switch to copy mode/remote control mode by operating a smartphone.

- 1 Turn on the camera and set it to shooting (movie/interval photo recording) mode.
- 2 Activate the application on your smartphone and connect the smartphone to the camera through Wi-Fi.
For details on smartphone settings, refer to “To set the smartphone” in the Handbook.
- 3 Change the mode of the camera using “PlayMemories Mobile” on the smartphone.

Notes

- Update “PlayMemories Mobile” to the latest version (Ver. 3.0 or later), before you start the smart remote control function.
- You can operate in the following shooting modes.
 - Movie mode/interval photo recording mode
- This function can be started only when the camera is in shooting standby.

Menu items changed by this firmware update

- [SEND] (Send) is deleted. You can connect the camera through Wi-Fi only in shooting mode. Follow the above steps to connect the camera through Wi-Fi, and switch to copy mode by operating a smartphone.
- The default setting of [A.OFF] (Auto Power Off) is changed to [60sec] from [10sec].
- The default setting of [RMOTE] (Remote) is changed to [ON] from [OFF].

Notes

- Since the default setting of [RMOTE] is changed to [ON], the power consumption when the camera is not connected through Wi-Fi may increase and result in a shorter shooting time. Setting [RMOTE] to [OFF] is recommended when the camera is not connected through Wi-Fi.
- After executing [RESET] (Reset), settings of the camera return to the defaults changed by this firmware upgrade.